



www.claypaky.it

S.I.P. 300

230V 300W

120V 300W

Congratulations on choosing a Clay Paky product! We thank you for your custom. Please note that this product, as all the others in the rich Clay Paky range, has been designed and made with total quality to ensure excellent performance and best meet your expectations and requirements.

INSTRUCTIONS MANUAL

Carefully read this instructions manual in its entirety and keep it safe for future reference.

It is essential to know the information and comply with the instructions given in this manual in order to ensure the fitting is installed, used and serviced correctly and safely.

CLAY PAKY S.p.A. disclaims all liability for damage to the fitting or to other property or persons deriving from installation, use and maintenance that have not been carried out in conformity with this instructions manual, which must always accompany the fitting.

CLAY PAKY S.p.A. reserves the right to modify the characteristics stated in this instructions manual at any time and without prior notice.


1 SAFETY INFORMATION

• Installation

Make sure all the parts for fixing the projector are in a good state of repair. Make sure the point of anchorage is stable before positioning the projector.

• Minimum distance of illuminated objects

The projector needs to be positioned so that the objects hit by the beam of light are at least 0.8 metres (2'7") from the lens of the projector.

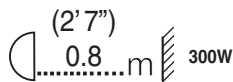

• Minimum distance from flammable materials

The projector must be positioned so that any flammable materials are at least 0.10 metres (4") from every point on the surface of the fitting.



It is permissible to mount the fitting on normally flammable surfaces.

• Maximum ambient temperature

For the fitting to operate well and reliably, the ambient temperature should not exceed 35°C (95°F).

• IP20 protection rating

The fitting is protected against penetration by solid bodies with a diameter of over 12 mm (0.47") (first digit 2), but not against dripping water, rain, splashes or jets of water (second digit 0).

• Protection against electrical shock

This fitting is classified, in accordance with the type of protection against electrical shock, in **Class I**. It must therefore be connected to a power supply system with efficient earthing.

It is, moreover, recommended to protect the supply lines of the projectors from indirect contact and/or shorting to earth by using appropriately sized residual current devices.

• Hooking up to the supply mains

The operations for connecting to the electricity mains must be carried out by a qualified electrical installer.

Check that the mains frequency and voltage correspond to the frequency and voltage for which the projector is designed, given on the electrical data label.

This label also gives the input power. Refer to this to evaluate the maximum number of fittings to connect to the electricity line in order to avoid overloading.

• Maintenance

Before starting any maintenance work or cleaning the projector, cut off power from the supply mains.

After switching off, do not remove any parts of the fitting for at least 7 minutes.

After this time the likelihood of the lamp exploding is virtually nil. If it is necessary to replace the lamp, wait for another 15 minutes to avoid getting burnt.

The fitting is designed to hold in any splinters produced by a lamp exploding.

The lenses must be mounted and, if visibly damaged, they have to be replaced with genuine spares.

• Temperature of the external surface

The maximum temperature that can be reached on the external surface of the fitting, in a thermally steady state, is 200°C (392°F).

• Lamp

- Carefully read the "operating instructions" provided by the lamp manufacturer.

- Immediately replace the lamp if damaged or deformed by heat.



The products referred to in this manual conform to the European Community Directives to which they are subject:

• Low Voltage 2006/95/CE


• Electromagnetic Compatibility 2004/108/CE

2 UNPACKING AND PREPARATION

• Unpacking

Open the cardboard box, take out the polystyrene wrapping and separate it, freeing the projector.

Remove the plastic bag from the projector and position this on a horizontal top.

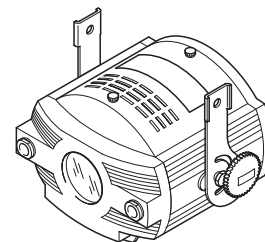

• Packing contents

Besides the projector, the packing also contains the following accessories:

- Bracket code 173008/001 (1).

- 2 countersunk head screws M6x10mm code 020005/021 (2).

- 2 countersunk washers code 020214/001 (3).

- Hexagonal wrench 4 mm code 050004 (4).

- 2 accessory holder guides of standard length 170 mm code 173007/801 (5).

- Double ended wrench 7/8 mm code 050003 (6).

- Wrench 16 mm cod. 750467/001 (7).


- Standard lens 1:2.4/100 mm code 173040/801 (8).

- Lens mounting code 173051/801 (9).

- Lens hood plate code 173017/001 (10).

- Socket for mounting on cable code 030234 (11).


- This instructions manual code 099579 (12).

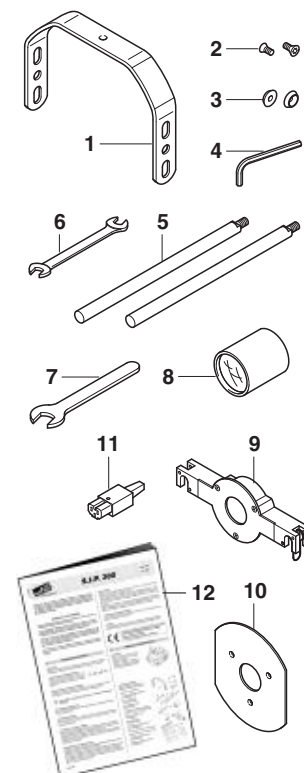

• Fitting projector mounting


Position the bracket (1) on the plates (13) according to the desired height. In correspondence with the chosen hole, place the countersunk washers (3) and the screws (2), then lock it all with the aid of the Allen wrench supplied (4).

Adjust the projector mounting in the desired position and lock it with the knobs (14).

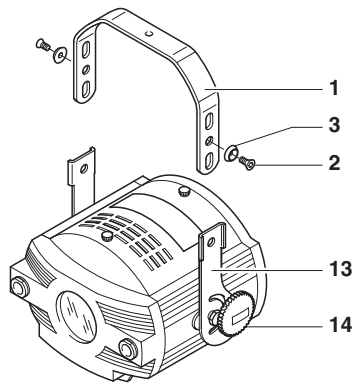

The bracket (1) can also be fitted towards the bottom of the projector. To do this, it is necessary to extract the knobs (14) from the rear hole and turn through 180° both the plates (13) and the spacers (15), then re-insert the knobs (14) into the front hole.

IMPORTANT: The central screw (16) must never be removed so as not to jeopardize the balance of the projector on the mounting.

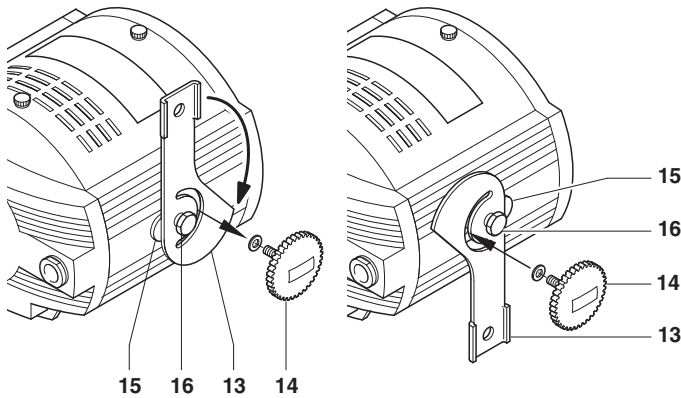


• Fitting the accessory holder guides

Screw the two accessory holder guides (5) into the threaded hole of the inserts (17), and tighten them appropriately with the 8 mm double ended wrench (6) supplied.

IMPORTANT: during this operation, take care not to turn the inserts (17) by blocking them in their position with the 16 mm special wrench (7) also supplied.

The entire range of static accessories available can be installed on the guides (5).

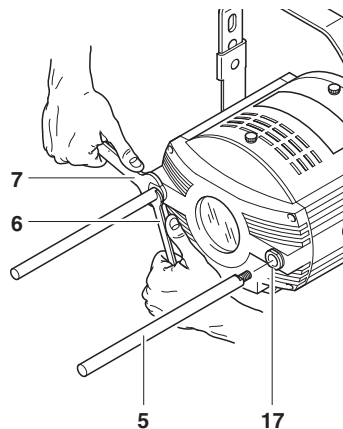

• Inserting the lamp

Refer to the instructions for opening the projector and changing the lamp in paragraph 4 MAINTENANCE.


3

INSTALLATION

• Installing the projector


The fitting must only be secured with the specific mounting, through the hole in the bracket (1).

It is recommended to use a screw $\varnothing 10\text{mm}$ with nut and spring washer.

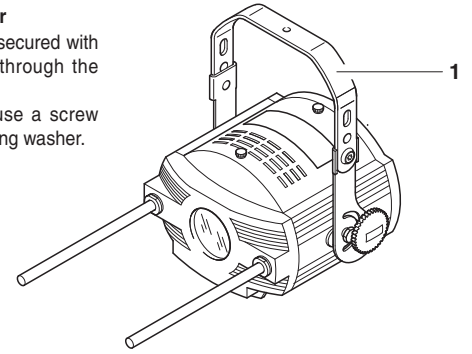

• Mains power connection

The projector has to be hooked up to the electricity mains via the specific socket (11) supplied.

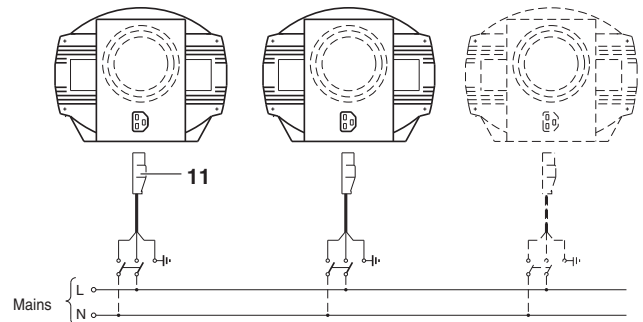


• Switching on the projector

After carrying out all the above operations, supply the projector, checking it works properly.

• Fitting the lens hood on the lens holder

If you wish to fit the lens hood plate (10) on the lens mounting (9), take out the 3 screws (18) with the aid of a Phillips screwdriver. Position the lens hood plate (10) on the cover ring (19) of the lens mounting (9) and put back in the 3 screws (18) tightening them appropriately.

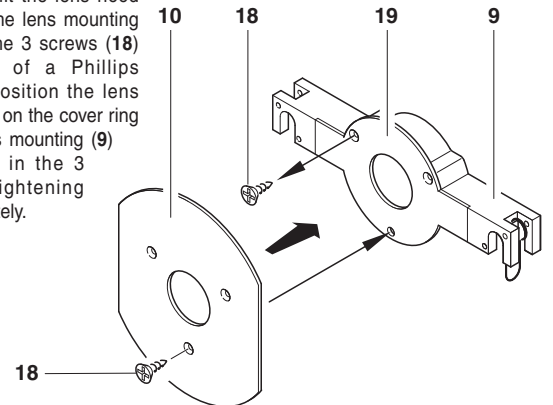


• Fitting the lens

Insert the lens (8) into the mounting (9) and tighten the handwheel (20). Rest the lens mounting on the guides (5) and lock it by turning the fixing clips (21) inwards until they clip on.

In addition to the lens supplied as standard there is a vast range of optional lenses.

• Fitting accessories for special effects

Fit the desired accessories on the guides, referring to the assembly instructions provided with the accessories.

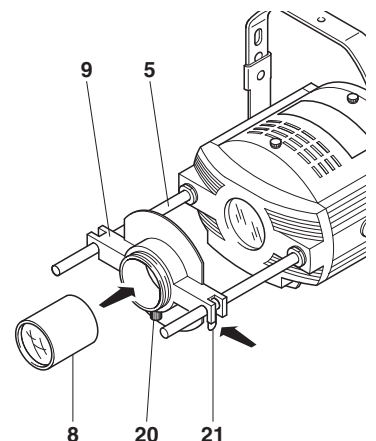


• **Centring the projector**

Slightly undo the mounting screw (22), move the projector horizontally, turning the beam of light in the desired direction, then re-tighten the mounting screw. Loosen the knobs (14), move the projector vertically on the bracket (1) to position the beam of light at the desired point, then lock the knobs (14).

• **Centring the lens**


Move the lens (8) and/or lens holder (9) axially to obtain perfect focusing.

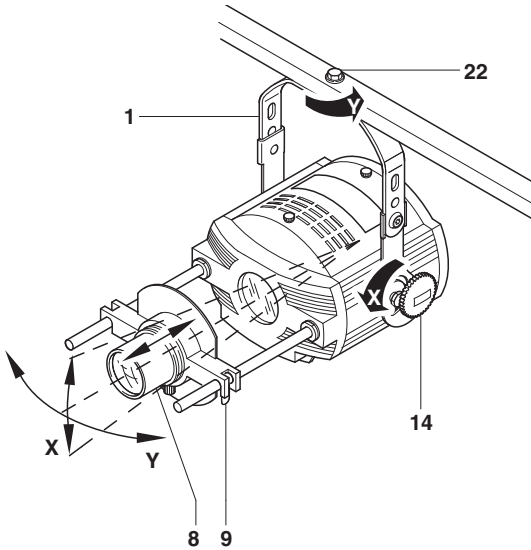

• **Rotating the axis of projection**

The holes on the bracket (1) for fixing the plates (13) are appropriately slotted to permit rotating the fitting on its axis by approximately 3°. This permits fine adjustment of the angle of the image projected, which is useful when using some particular accessories such as for gobo projection.

Using the hexagonal wrench (4) supplied, loosen a screw (2) and turn the projector to the position required, and then re-tighten the screw (2).

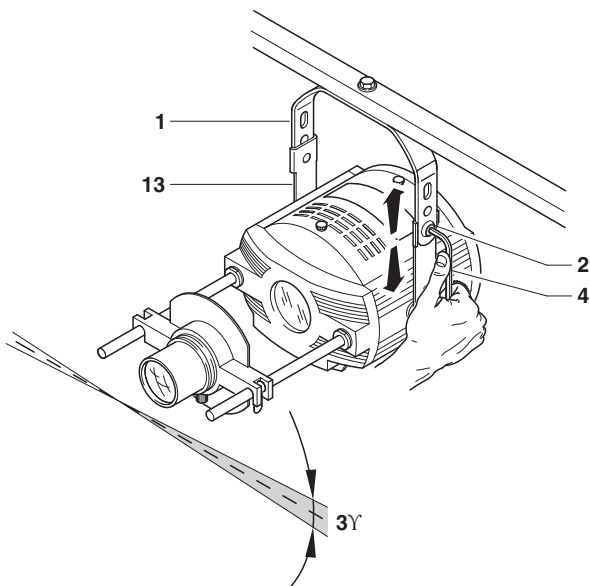


4

MAINTENANCE

• **Opening and closing the projector**


Loosen the handwheels (23) and remove the re-lamping cover (24) from the projector. After maintenance, fit the cover (24) back on and lock the handwheels (23).

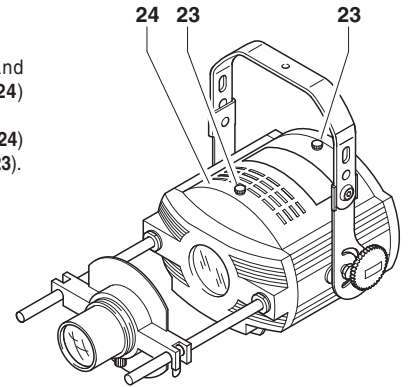

• **Re-lamping**

Take the cover off the projector, then remove the lamp to replace (25) from the connection (26) by gripping its base and taking it out vertically. Insert the new lamp into the connection (26) checking the correct position of the terminals.

WARNING: Do not touch the lamp's bulb with bare hands. Should this happen, clean the bulb with a cloth soaked in alcohol and dry it with a clean, dry cloth.

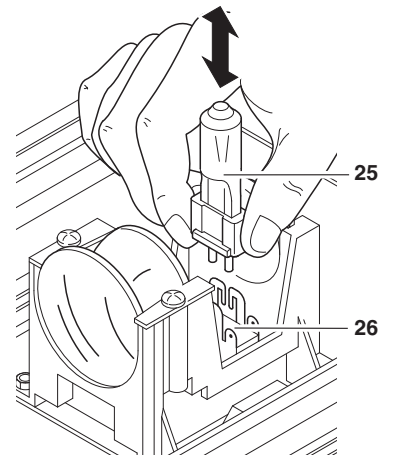

• **Periodical cleaning**


To keep the luminous efficiency of the projector unchanged, it is vital to periodically clean the parts where dust and grease can accumulate.

Observing the following guidelines will help keep the projector in perfect working order for a long time.

To remove dirt from the lens, use a soft cloth dampened with any liquid detergent for cleaning glass.

Caution: Never use solvents or spirits.

● Parts requiring frequent cleaning.

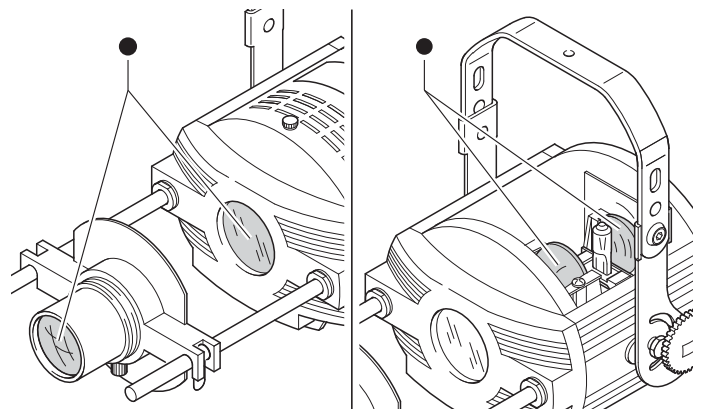

CAUSE AND SOLUTION OF PROBLEMS			TROUBLE
DEFECTIVE PROJECTION			
REDUCED BRIGHTNESS			
	POSSIBLE CAUSES	CHECKS AND REMEDIES	
●	No mains supply.	Check there is supply power.	
● ●	Lamp exhausted or defective.	Replace lamp (see instructions).	
●	Lenses or reflector broken.	Call an authorized technician.	
● ●	Dust or grease deposited.	Clean (see instructions).	

Power supply

- MAX 240V 50/60Hz

Input power

300VA

Lamp

- Halogen M38 300W
 - Connection GY9.5
 - Colour temperature 2,900 K
 - Luminous flux (120V) 5,500 lm
 - Luminous flux (230V) 5,000 lm
 - Mean life 2,000 h

Optical unit

- Base in die-cast aluminium.
- Twin lens condenser.
- Spherical reflector with a high luminous efficiency.

Lens units

- Standard: 1:2,4/100 mm (30,9°)
- Optional: 1:2,8/45 mm multi-lens (64,2°)
- Optional: 1:2,8/60 mm multi-lens (45,8°)
- Optional: 1:2,8/85 mm multi-lens (34,4°)
- Optional: 1:2,8/120 mm multi-lens (24,1°)
- Optional: 1:3,5/150 mm multi-lens (19,5°)
- Optional: 1:4/165 mm (17,2°)
- Optional: 1:4,4/200 mm (14,3°)
- Optional: 1:3,5/70÷120 mm zoom (39,5°÷22,9°)

Body

- In die-cast and extruded aluminium.
- Epoxy powder painting.

Mounting

- Bracket in steel painted with epoxy powders.
- Three installation positions with a step of 25 mm (0.98").
- Bracket adjustable on 120°.

Working position

Operation in any position.

Weights and dimensions

Weight: 2,3 kg (5 lbs 1 ozs).

