4 CHANNEL FUNCTIONS AND OPTIONS

CHANNEL	FUNCTION
1	COLOUR WHEEL
2	GOBO CHANGE/DIMMER/STOPPER/STROBE
3	PAN
4	TILT

Select the options by setting the dip-switches as indicated.

OPTIONS

