

Order your Spare Parts here -> <http://www.lichtboxx.com/index.php/cPath/158/language/en>
www.lightspares.com | ©MS Lichttechnik GmbH, Hirschstettner Strasse 19A, 1220-Vienna, Austria

Complete Spare Parts List of ROBE DMX Control 1024

13050684	Adaptor controller 512/1024 230V, universal
11030282	Body shell of controller
13050659	Button of switch /black
13050660	Button of switch for red LED/black
13050657	Connector for keyboard
12040064	Data wheel D46 (plastic)
13050656	Encoder 1-2-36
13050607	Floppy disc drive
11011243	Holder of data wheel
11011589	Holder of encoder
17030236	Joystick plastic
13050658	Knob of slider potentiometer
18040041	Nut M108 - low
11030281	Panel - main DMX Control 1024
13030204	PCB Display-4002A8
13030312	PCB Faders-2-K1
13050606	PCB Floppy
13030205	PCB Joystick
13030207	PCB Main SDE-2-C
13030206	PCB SDE-2-K2
19020041	Plastic cover (Long)
19020040	Plastic cover (Short)
17030237	Plastic cover of data wheel
17030235	Plastic part of DC Input port
12050273	Plexiglass 26x19x35mm
12050272	Plexiglass f. display 154x255x3mm
13050908	Potentiometer slider DMX1024
17030234	Rubber base #A060
18010032	Screw crosswise cup countersink M3x8
18510001	Screw crosswise cup headed M2x4
18010057	Screw crosswise cup headed M2x6
18010027	Screw crosswise cup headed M3x20
18010052	Screw crosswise cup headed M3x30
18010016	Screw crosswise cup headed M3x6
18020009	Screw self-tapping 29x65
18020002	Screw self-tapping 29x95
12010133	Spacer hexagon SW5 L5 M3
13050661	Switch main SC768
13050811	Switch SW 1-65
18050037	Washer M14 silver
13050655	XLR female 3-pin connector

**Order your Spare Parts here -> <http://www.lichtboxx.com/index.php/cPath/158/language/en>
www.lightspares.com | ©MS Lichttechnik GmbH, Hirschstettner Strasse 19A, 1220-Vienna, Austria**