

Order your Spare Parts online here -> [lightspares.com](https://lightspares.com) Worldwide Express Delivery  
Part or number not found? Send us a request! -> [Contact us!](#)

### Spare Parts List of Pani BP 4 ©

11-0227	Mounting plate
11-0228	Mounting plate for tangential blower
11-0226	Lamp Base Support
31-0050	Cover Hinge
21-0097	Tangential Blower
21-0098	Tangential Blower
432577	Radial Blower
22-0017	CEE- Connector 4x32A
21-0101	Annex Housing HB. 10. AG- VS
21-0100	Pin Insert HE 6/10 Sti. s
22-0004	Hour Counter
22-0037	Igniter
23-0008	ON - Pushbutton (green)
23-0009	OFF- Pushbutton (red)
21-0025	Connector
23-0017	Miniature Voltage Selector SWA
21-0102	Snap Guides
22-0045	Lamp Base G38 with Lock Lever
23-0018	Resistor in Aluminum Housing
23-0019	Resistor in Aluminum Housing
21-0019	Wing Nuts M8 Galvanized
21-0086	Adjustable Clamping Lever M8
21-0104	Adjustable Clamping Grip
21-1516	Label "PANI BP4CT"
21-0141	Lock with spring ring
21-0143	Lock base
11-0125	Switch Bracket
21-0106	Mounting Screw for Ventilator Housing Cable Bushung with Retaining Clamp and
90-0012	Guard
90-0054	Power Connector C146A
90-0055	Ventilator Housing Complete
90-0114	Ventilator Connector
31-0070	Grip
31-0047	Grip for Fine Adjustment
21-0150	Pinion Gear
21-0088	Rack
12036	Undercarriage
31-0071	Plate for Support Bracket
11-0203	Lift-off Spindle Complete
21-0111	PVC Sleeve - Black
21-0112	PVC Sleeve - Black
21-0062	Hand Wheel

Order your Spare Parts online here -> [lightspares.com](https://lightspares.com) Worldwide Express Delivery  
Part or number not found? Send us a request! -> [Contact us!](#)

21-0107	Adjustable Clamp Lever ?32/M10	
12001	Rolling Undercarriage	
31-0071	Plate for Support Bracket	
11-0203	Lift-off Spindle Complete	
21-0060	Casters	
21-0061	Fixed Rollers	
21-0111	PVC Sleeve - Black	
21-0112	PVC Sleeve - Black	
21-0062	Hand Wheel	
21-0107	Adjustable Clamp Lever ?32/M10	
12037	Projection Cart	
21-0147	Frame	
21-0148	Casters	
21-0149	Fixed Rollers	
12038	Hanging Apparatus	
90-0015	Safety Switch	
12513	Slide Carrier	
11-0107	Guide Rollers	
11-0108	Excentric Guide Rollers	
21-0071	Side Springs	
21-0072	Bolts	
21-0073	Nuts	
21-0074	Adjustment Spindle	
21-0075	Angle Bracketl	
21-0076	Spring	
21-0077	Cylindrical Screw	
21-0078	Ball Knob	
31-0042	Pressure Springs	
31-0043	Slide Holder 18x 18	
11-0219	Locking Pin and Guide Rollers for Slide Carrier	
21-0113	Pin Insert	
22-0046	CEE- Coupling 4x32A	
22-0047	Connector Housing CHV10	
90-0034	Cable Strain Relief Complete	
90-0056	Cable Strain Relief Complete	
8894129		
5	Wheels	for electronic ballast BC 4000 EP
6309014	Choke	for electronic ballast BC 4000 EP
8293145		
0	Clip	for electronic ballast BC 4000 EP
8894101		
4	Knob	for electronic ballast BC 4000 EP
8894140		
0	Swing Bracket	for electronic ballast BC 4000 EP



Your online store for all stage lighting spare parts <https://lightspares.com>  
©MS Lichttechnik GmbH, Hirschstettner Strasse 19A, 1220-Vienna, Austria

Order your Spare Parts online here -> [lightspares.com](https://lightspares.com) Worldwide Express Delivery  
Part or number not found? Send us a request! -> [Contact us!](#)

7200053		
5	Terminal Cover (Voltage Selector)	for electronic ballast BC 4000 EP
8462007		
9	Terminal Block	for electronic ballast BC 4000 EP
8102953		
1	Lever	for electronic ballast BC 4000 EP
8850524		
0	Protective Cover	for electronic ballast BC 4000 EP
8461015		
6	Grounding Clamp	for electronic ballast BC 4000 EP
7101951		
1	Hand Grip	for electronic ballast BC 4000 EP
6301015		
0	Auto- Transformator	for electronic ballast BC 4000 EP
8461015		
6	Grounding Clamp	for electronic ballast BC 4000 EP
8461015		
5	Clamp	for electronic ballast BC 4000 EP
8461015		
4	Lock	for electronic ballast BC 4000 EP
8461015		
2	End Plate	for electronic ballast BC 4000 EP
8847112		
2	Guard	for electronic ballast BC 4000 EP
8820539		
6	Resistor	for electronic ballast BC 4000 EP
8832002		
0	Capacitor 20 ?F	for electronic ballast BC 4000 EP
8832004		
1	Capacitor 40 ?F	for electronic ballast BC 4000 EP
8101950		
5	Swing Bracket Feet	for electronic ballast BC 4000 EP
8890150		
0	Disc Switch	for electronic ballast BC 4000 EP
8851620		
0	Fuse Holder 6,3x 32	for electronic ballast BC 4000 EP
8851620		
1	Fuse Cap 6,3x 32	for electronic ballast BC 4000 EP
8852610		
2	Fuse 10 AT	for electronic ballast BC 4000 EP
7880059		
0	Control Card Complete	for electronic ballast BC 4000 EP
1-0069	reflector retaining spring	for BP 4 II
11-0070	cover for carrier plate	for BP 4 II
11-0071	mounting plate for heat sink	for BP 4 II
11-0072	Guide	for BP 4 II
21-0013	directional blower for slide	for BP 4 II
21-0019	wing nut M8 galvanized	for BP 4 II
21-0021	flat milled nut M4	for BP 4 II

Order your Spare Parts online here -> [lightspares.com](https://lightspares.com) Worldwide Express Delivery  
Part or number not found? Send us a request! -> [Contact us!](#)

21-0025	accessory connector	for BP 4 II
21-0027	directional blower	for BP 4 II
21-0028	pin insert	for BP 4 II
21-0029	lower housing louvers	for BP 4 II
21-0030	upper housing louvers	for BP 4 II
21-0033	fluted knob screw lock ring fastener (slotted head) with screw lock	for BP 4 II
21-0142	ring	for BP 4 II
21-0143	lower section fastener	for BP 4 II
22-0002	connector amphenol	for BP 4 II
22-0017	flanged plus (straight) 4x32A	for BP 4 II
22-0018	wall mounted connector 4x32AA	for BP 4 II
22-0020	Igniter	for BP 4 II
23-0007	microswitch	for BP 4 II
23-0008	ON switch	for BP 4 II
23-0009	OFF switch	for BP 4 II
24-0013	heat reflecting filter 231x230x3	for BP 4 II
24-0014	heat absorbing filter 230x22x4mm	for BP 4 II
24-0015	UV Filter 231x230x4	for BP 4 II
24-0016	fresnel lens (lampside) d=250	for BP 4 II
24-0017	condensor lens 33-60cm d=230 f=390	for BP 4 II
24-0018	condensor lens 11-27cm d=230 f=300	for BP 4 II
24-0019	front condensor lens 33-0cm d=230 f=300	for BP 4 II
24-0047	reflector d=140	for BP 4 II
31-0013	connector housing	for BP 4 II
31-0016	fastener for HV cable	for BP 4 II
31-0017	ground housing	for BP 4 II
31-0018	objective fixing bracket cable strain relief with nut and	for BP 4 II
90-0012	foldprotection	for BP 4 II
90-0031	base right	for BP 4 II
90-0032	base left	for BP 4 II
90-0092	heat absorber filter	for BP 4 II
90-0098	lamp carriage assembly rear housing withought height adjustment	for BP 4 II
90-0103	assembly	for BP 4 II
90-0139	igniter cable complete 6mm <sup>2</sup> l=330mm	for BP 4 II

