

Order your Spare Parts online here -> lightspares.com Worldwide Express Delivery
Part or number not found? Send us a request! -> [Contact us!](#)

Spare Parts List of Pani BP 6 GT ©

68-01-	Undercarriage Main Assy
MD80KB	Casters
MDF80KB	Wheels
DIN950-AL-100-B12-A	Hand Wheel
68-28-04/a	Lift –off Spindle
DIN6311-32-S	Pressure Piece
GN226/80/M16	Disc Grip
68314-6831	Complete tilt adjustment including Upper mounting bracket and lower support
68-02-	Condenser Carrier Main Assy. No.:
PN1024	Objective Lens Supports
DIN315-M8	Wing Nuts
GN6335. 4-SK-32-M6-50	Cross Grip Bolts
DIN467-M4	Flat Milled Nuts
68-03-	Housing Main Assy. No.:
68-05-48	Hinges for Lamp Access Doors
68-05-14/c	Side Locks (available as a set)
69-05-15/a	Switch Brackets for (available as a set)
68-36-	Safety Switch complete
68-05-46	Bracket for Control Box
91-18-	Lamp Base Main Assy. No.:
91-18-	Lamp Base left and right complete
91-18-07	Heat Shield for Cooling Fins (half circle)
100-15-28	Heat Shield (angularly)
GN6335. 4-SK-32-M6-35	Cross Grip Bolts
100-01-	Electrical Materials Main Assy. No.:
22-0167/US	Igniter
21-0058	Tangential Blower (mounted left)
21-0059	Tangential Blower (mounted right)
32-0053	Tangential Blower (igniter area)
331-528	Thermo switch 90°
100- 06-	Lamp Carriage Main Assy. No.:
100- 06-1-	Lamp Carriage complete
100-15-15/a	Reflector Springs
100-15-19	Spherical Cold Mirror - Diameter 165 mm
100-15-08	Lamp Supports
100- 03-	Optical Materials Main Assy. No.:
222-03-05	Meniscus Lens Ø 147
12046	PANI-universal filter Ø 219x4
100-15-19	Spherical Cold Mirror Diam.165 mm
100-04-	Control Housing (Projector) Main Assy. No.:
31.11.000	Auxilliary Connectors 3- pole
432522/431756	Connector Housing / Pin Unit



Order your Spare Parts online here -> lightspares.com Worldwide Express Delivery
Part or number not found? Send us a request! -> [Contact us!](#)

100-11-T	Cover Insulation Main Assy. No.:	
100-11-T	Insulation complete	
88941295	Tires	for Ballast BC 6000 EP
82950308	Wheels	for Ballast BC 6000 EP
81105535	Lower Choke Anchors	for Ballast BC 6000 EP
88941401	Shock Mounts	for Ballast BC 6000 EP
63090137	Choke	for Ballast BC 6000 EP
71011134	Housing	for Ballast BC 6000 EP
82931450	Latch	for Ballast BC 6000 EP
88941014	Knob	for Ballast BC 6000 EP
81019530	Latch Guide	for Ballast BC 6000 EP
86760043	Spring	for Ballast BC 6000 EP
81105534	Upper Choke Anchors	for Ballast BC 6000 EP
87530080	Voltage Selector	for Ballast BC 6000 EP
71012222	Upper Cover	for Ballast BC 6000 EP
84610165	Clamp SAK 16/ 35	for Ballast BC 6000 EP
72000535	Voltage Selector Cover	for Ballast BC 6000 EP
86802092	Handle Stop Pins	for Ballast BC 6000 EP
81029531	Handle Stop Yoke	for Ballast BC 6000 EP
88505250	Circuit Breaker Frame	for Ballast BC 6000 EP
71019511	Handle	for Ballast BC 6000 EP
84610162	Grounding Clamp	for Ballast BC 6000 EP
88472201	Circuit Breaker	for Ballast BC 6000 EP
84620085	Clip Strip	for Ballast BC 6000 EP
88205275	Resistor	for Ballast BC 6000 EP
87305995	Heat Shield	for Ballast BC 6000 EP
88521021	Fuse 2AT	for Ballast BC 6000 EP
88521061	Fuse 6,3 AT	for Ballast BC 6000 EP
88320080	Capacitor 75 F	for Ballast BC 6000 EP
88320041	Capacitor 40 F	for Ballast BC 6000 EP
71104764	Capacitor Mounting Plate	for Ballast BC 6000 EP
81019505	Spring Loaded Feet	for Ballast BC 6000 EP
88901500	Slide Switch	for Ballast BC 6000 EP
87534094	Cable Strain Relief	for Ballast BC 6000 EP
87534098	Cable Strain Relief nuts	for Ballast BC 6000 EP
93643061	Power Cable 2 m	for Ballast BC 6000 EP
71011980	Front Panel	for Ballast BC 6000 EP
74140003	Pushbutton Unit	for Ballast BC 6000 EP
87435204	Circuit Breaker Frame	for Ballast BC 6000 EP
78800560	Printed Circuit Card	for Ballast BC 6000 EP

