

Order your Spare Parts here -> <http://www.lichtboxx.com/index.php/cPath/158/language/en>  
[www.lightspares.com](http://www.lightspares.com) | ©MS Lichttechnik GmbH, Hirschstettner Strasse 19A, 1220-Vienna, Austria

## Complete Spare Parts List of ARRI EB 1200

L4.82522.E	HF-gate drive cpl.	HF-Ansteuerung kpl.
L4.82515.E	Low noise switch with knob	Noise-Schalter mit Drehknopf
L4.82513.E	Mains switch	Netzschalter
L4.82523.E	Mains board	Trafokarte
L4.82508.E	Power FET IRFP 450 FI	Power FET IRFP 450 FI
L4.82518.E	Fuse-set (10 pieces)	Feinsicherung-Set (10 Stück)
L4.82503.E	Rubber foot-set back (4 pieces)	Gummifuß-Set Rückwand (4 St.)
L4.82502.E	Rubber foot-set cpl. (4 pieces)	Gummifuß-Set kompl. (4 Stück)
L4.82521.E	LF-gate drive cpl.	NF-Ansteuerung kpl.
L4.82520.E	Control board	Regelkarte
L4.82501.E	Front handle-set cpl. (2 pieces)	Frontgriff-Set kompl. (2 Stück)
L4.82509.E	Diode bit 30 PI 800	Diode Bit 30 PI 800
L4.82510.E	Input rectifier	Netzgleichrichter
L4.82516.E	Dimm pot with knob	Dimmpotentiometer mit Drehknopf
L4.82517.E	Start resistor-set (5 pieces)	Startwiderstand-Set (5 Stück)
L4.82514.E	Earth test switch	Erdtaster

Order your Spare Parts here -> <http://www.lichtboxx.com/index.php/cPath/158/language/en>  
[www.lightspares.com](http://www.lightspares.com) | ©MS Lichttechnik GmbH, Hirschstettner Strasse 19A, 1220-Vienna, Austria