

**Order your Spare Parts here -> <http://www.lichtboxx.com/index.php/cPath/158/language/en>
www.lightspares.com | ©MS Lichttechnik GmbH, Hirschstettner Strasse 19A, 1220-Vienna, Austria**

Complete Spare Parts List of Martin Freekie

02000004	IC CPU W77E58, 40 Mhz, Freekie
02012002	IC gal 16V8-25, Freekie
02121722	IC transceiver 75176, Freekie
02200014	IC photo coupl.,6N136, Freekie
04222013	100k Ohm fader, master/channel, Freekie
04222014	100k Ohm fader, pitch, Freekie
04223003	2k Phm trim potenti., Freekie
04225003	Joystick, 100k, Freekie
04350031	X-tal 32 Mhz, Freekie
05123434	DIN socket, 5 pin, Freekie
05123435	Jack socket, Freekie
05123436	DC socket, Freekie
05521000	Push button, Freekie
05523025	Power swittch, Freekie
05551050	Knob, push button, Freekie
05552007	Button, fader, Freekie
05553003	Cap, joystick, Freekie
05830003	Michrophone, Freekie
32020506	Rubber feet, Freekie
55721000	Front plate, Freekie
55721001	14 pin flat cable, Freekie
55721002	20 pin flat cable, Freekie
62010030	PCB, main/processor, Freekie
62010527	PCB, fader, Freekie
62010528	PCB, master fader, Freekie
62010529	PCB, display, Freekie
62014503	PCB w. 3 & 5 pin XLR, Freekie

**Order your Spare Parts here -> <http://www.lichtboxx.com/index.php/cPath/158/language/en>
www.lightspares.com | ©MS Lichttechnik GmbH, Hirschstettner Strasse 19A, 1220-Vienna, Austria**