

Order your Spare Parts here -> <http://www.lichtboxx.com/index.php/cPath/158/language/en>
www.lightspares.com | ©MS Lichttechnik GmbH, Hirschstettner Strasse 19A, 1220-Vienna, Austria

Complete Spare Parts List of ARRI EB 12/18

L4.82572.E	HF-gate drive board	HF-Gate-Ansteuerung
L4.82611.E	Input rectifier	Netzgleichrichter
L4.82612.E	Mains contactor	Schütz
L4.82513.E	Mains switch	Netzschalter
L4.82559.E	HF-capacitor board	HF-Kondensator-Platine
L4.82573.E	Transistormodule	Transistormodul
L4.82577.E	Input capacitor	Ladeelko
L4.82550.E	HF-snubber board	HF-Entlastung
L4.82566.E	LF-base drive board	NF-Ansteuerung
L4.82571.E	Control board act. line filter	Regelkarte akt. Netzfilter
L4.82569.E	LF-snubber board	NF-Entlastung
L4.82609.E	Control board	Regelkarte
L4.82532.E	Power FET module	Power FET Modul
L4.82533.E	Diode module	Diodenmodul
L4.82516.E	Dimm pot with knob	Dimmpotentiometer mit Drehknopf
L4.82578.E	Ignitor and start resistor-set	Zünd- und Startwiderstand-Set
L4.82514.E	Earth test switch	Erdtaster

Order your Spare Parts here -> <http://www.lichtboxx.com/index.php/cPath/158/language/en>
www.lightspares.com | ©MS Lichttechnik GmbH, Hirschstettner Strasse 19A, 1220-Vienna, Austria