

Order your Spare Parts here -> <http://www.lichtboxx.com/index.php/cPath/158/language/en>
www.lightspares.com | ©MS Lichttechnik GmbH, Hirschstettner Strasse 19A, 1220-Vienna, Austria

Complete Spare Parts List of High End Systems Hog 4

80320020	ARMREST
80070715	ARMREST HINGE
90709121	ARMREST SCREW, 5 PER ARMREST
90701098	ARMREST WASHER, 5 PER ARMREST
90604008	BATTERY, LITHIUM 3V CR2032
80450107	BEZEL, LEFT SIDE
80450106	BEZEL, RIGHT SIDE
80450109	BEZEL, DISPLAY, LEFT SIDE
80450108	BEZEL, DISPLAY, RIGHT SIDE
91100510	BEZEL, SCREW
25090010	BUTTON, FLASH
25090011	BUTTON, STANDARD
90724019	BUTTON, RUBBER COVER STRIP FOR SOFT BUTTON PCB
80040065EF	BUTTON, TRACKBALL, UPPER RIGHT
80040066EF	BUTTON, TRACKBALL UPPER LEFT / LOWER RIGHT
90409509EF	CABLE, 7" DISPLAY, LVDS 30"
90409510EF	CABLE, 17" DISPLAY, LVDS 34"
90409457EF	CABLE, RIBBON, SOFT BUTTONS PCBS, 8 CONDUCTOR
90409508EF	CABLE, RIBBON, JOG/SHUTTLE WHEEL, 26 CONDUCTOR
90409541EF	CABLE, SATA 20"
90409211EF	CABLE, USB "A" PANEL MOUNT
90409478EF	CABLE, USB, ACCESSORY DRAWER
90409544EF	CABLE, USB DISPLAY, LEFT
90409540EF	CABLE, USB DISPLAY, RIGHT
90409475EF	CABLE, USB, DMX
90409473EF	CABLE, USB, HUB
90409474EF	CABLE, USB, LTC
90409472EF	CABLE, USB, PLAYBACK PCB
90409471EF	CABLE, USB, PROGRAM PCB
90409479EF	CABLE, USB, TOP BOX
90409476EF	CABLE, USB, TRACKBALL
61100004	DESK LIGHT, 18"
90306204EF	DISPLAY / TOUCHSCREEN ASSEMBLY 17", LARGE
90306203EF	DISPLAY / TOUCHSCREEN ASSEMBLY 7", SMALL
90702008	DISPLAY / TOUCHSCREEN ASSEMBLY 7", SMALL, SPACER
61080008	DUST COVER
B560812	DVD DRIVE
B560809	DVD DRIVE, SATA ADAPTER
99260695	DVD DRIVE, MOUNT, LEFT SIDE OF THE DRIVE
99080451	DVD DRIVE, MOUNT PLATE, RIGHT SIDE OF THE DRIVE

90410061	DVD DRIVE, MOUNT, GROMMET
91010412	HARD DRIVE, MOUNT, RUBBER ISOLATOR
90706012	DVD DRIVE, MOUNT, WASHER
B372714	ENCODER, 5 MAIN ENCODERS
90724016	ENCODER BUTTON, SMALL GRAY OVAL BUTTONS
90410167	ENCODER WHEEL, 5 MAIN ENCODERS
90410170	ENCODER WHEEL, JOG WHEEL, DOES NOT INCLUDE SHUTTLE RING
90410169	ENCODER WHEEL, SHUTTLE RING
80070710	ENCODER WHEEL, VERTICAL, RATE AND INTENSITY WHEELS
25091362	ENCODER WHEEL, VERTICAL, FELT WASHER
99080454	ENCODER WHEEL, VERTICAL, MOUNT
90409362EF	ENCODER WHEEL, VERTICAL, SENSOR ASSEMBLY
99260738	ENCODER WHEEL, VERTICAL, SPACER, INTENSITY WHEEL ONLY
90405313EF	FADER, MOTORIZED
90405336EF	FADER KNOB, CONDUCTIVE
91240308	FADER SCREW
25091352	FOOT, RUBBER, ON THE BOTTOM OF CONSOLE
99210003	GAS SPRING
90706218	GAS SPRING FRICTION WASHER
99400119	GAS SPRING HUB / PIVOT
90706113	GAS SPRING TEFLON WASHER
90903058EF	HARD DRIVE, SSD 20GB 2.5"
90903061EF	HARD DRIVE, 7200 RPM, 750GB
99260696	HARD DRIVE, MOUNT
99260697	HARD DRIVE, MOUNT, REAR
90414012	HARD DRIVE, MOUNT, RUBBER ISOLATOR
91110305	HARD DRIVE, MOUNT, SCREW
90409454EF	HARNESS, 7" DISPLAY BACKLIGHT
90409470EF	HARNESS, AC POWER SUPPLY
90409469EF	HARNESS, AC SWITCH
90409456EF	HARNESS, DESKLIGHT, INCLUDES CONNECTOR
90409453EF	HARNESS, INTERLOCK SWITCH
90409458EF	HARNESS, LCD BACLIGHT LEFT
90409459EF	HARNESS, LCD BACLIGHT RIGHT
90409452EF	HARNESS, LED STRIP DOUBLE
90409451EF	HARNESS, LED STRIP SINGLE
90409307EF	HARNESS, LTC / MIDI
90409465EF	HARNESS, POWER, CARRIER PCB
90409461EF	HARNESS, POWER, DC TO POWER DISTRIBUTION
90409468EF	HARNESS, POWER, DMX PCB
90409462EF	HARNESS, POWER, DVD/HD
90409480EF	HARNESS, POWER, FAN EXTENSION, 4 WIRE
90409466EF	HARNESS, POWER, PROGRAM PCB
90409467EF	HARNESS, POWER, PLAYBACK PCB
90409463EF	HARNESS, POWER, USB HUB
90409477EF	HARNESS, TRACKBALL
90803035EF	IEC, POWER CABLE, VLOCK

90406195EF	IEC, POWER INLET, VLOCK
90411092	IEC, POWER INLET INSULATOR MYLAR
80060019EF	LED, 12 LED KEYBOARD STRIP, 3 PER CONSOLE
99090109	LED LENS, CLEAR, 36 PER CONSOLE
99090110	LED LENS, RETAINING RING, 36 PER CONSOLE
80070643	LED SHIELD PLATE
90409529EF	LED STRIP, BLUE REAR VENT LEDS
80060029EF	PCB, 4/5 LED FLEX
80030121EF	PCB, CARRIER / PROCESSOR PCB ASSEMBLY
80030122EF	PCB, DMX X 8 OUTPUT
80040051EF	PCB, JOG / SHUTTLE ASSEMBLY
80030096EF	PCB, MIDI IN/OUT/THRU
80010232EF	PCB, MOTORIZED FADER, PROCESSOR
80040050EF	PCB, PLAYBACK ASSEMBLY
80060037EF	PCB, POWER DISTRIBUTION
80040048EF	PCB, PROGRAM ASSEMBLY
80040065EF	PCB, SOFT BUTTON PCB, UPPER RIGHT
80040066EF	PCB, SOFT BUTTON PCB, UPPER LEFT / LOWER RIGHT
80030099EF	PCB, TIMECODE
80030106EF	PCB, TOUCHSCREEN HUB
80010243EF	PCB, USB HUB
90902071EF	PCB, VIDEO MODULE, 17" DISPLAY, 2 PER CONSOLE.
90902072EF	PCB, VIDEO MODULE, 7" DISPLAY, 1 PER CONSOLE.
91000406	PCB, SCREW, FOR PLAYBACK, PROGRAMMING TO FRONT PANEL
B563088	POWER SUPPLY
90405009	POWER SWITCH
61070008	ROAD CASE
90724020EF	TRACKBALL
90903067	USB FLASH DRIVE, 2GB, HOG, BLACK
90903068	USB FLASH DRIVE, 2 GB, RESTORE, RED

**Order your Spare Parts here -> <http://www.lichtboxx.com/index.php/cPath/158/language/en>
www.lightspares.com | ©MS Lichttechnik GmbH, Hirschstettner Strasse 19A, 1220-Vienna, Austria**