

ROBE[®] lighting s.r.o. • Czech Republic • www.robe.cz

Robin BMFL Spot

Table of contents

1. Safety instructions	3
2. Operating determination	4
3. Fixture exterior view	5
4. Installation	6
4.1 Connection to the mains	6
4.2 Installing the lamp	7
4.3 Lamp adjustment	
4.4 Replacing colour filters	
4.5 Replacing rotating gobos	
4.6 Replacing graphic wheels	
4.7 Rigging the fixture 4.8 DMX-512 connection	
4.8 DMX-512 connection	
5. Remotely controllable functions	
5. Remotely controllable functions	
6. Control menu map	
6. Control menu map7. Control menu	
 6. Control menu map 7. Control menu	
 6. Control menu map 7. Control menu	
6. Control menu map 7. Control menu 7.1 Tab " Address" 7.2 Tab "Information" 7.3 Tab "Personality"	
 6. Control menu map 7. Control menu	18 21 22 23 25 27
6. Control menu map 7. Control menu 7.1 Tab " Address" 7.2 Tab "Information" 7.3 Tab "Personality" 7.4 Tab "Manual Control" 7.5 Tab "Stand-alone"	18 21 22 23 25 27 27
6. Control menu map 7. Control menu 7.1 Tab " Address" 7.2 Tab "Information" 7.3 Tab "Personality" 7.4 Tab "Manual Control" 7.5 Tab "Stand-alone" 7.6 Tab "Service"	18 21 22 23 23 25 27 27 28
6. Control menu map 7. Control menu 7.1 Tab " Address" 7.2 Tab "Information" 7.3 Tab "Personality" 7.4 Tab "Manual Control" 7.5 Tab "Stand-alone" 7.6 Tab "Service" 7.7 Icon "Lamp menu"	18 21 22 23 23 25 27 27 27 28 31
 6. Control menu map	18 21 22 23 23 25 27 27 27 27 28 31 31
 6. Control menu map	18 21 22 23 23 25 27 27 27 27 27 28 31 31 31 32
 6. Control menu map	18 21 22 23 23 25 27 27 27 28 31 31 31 32 33
 6. Control menu map	18 21 22 23 23 25 27 27 27 28 31 31 31 32 33

CAUTION!

Keep this device away from rain and moisture! Unplug mains lead before opening the housing!

FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE YOU INITIAL START - UP!

1. Safety instructions

Every person involved with installation and maintenance of this device have to: - be gualified

- follow the instructions of this manual

CAUTION! Be careful with your operations. With a high voltage you can suffer a dangerous electric shock when touching the wires!

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Important:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

During the operation the housing becomes hot). Allow the fixture to cool approximately 20 minutes prior to manipulate with it.

Make sure that the available voltage is not higher than stated on the rear panel.

Always plug in the power plug least. Make sure that the power-switch is set to off-position before you connect the device to the mains. The power plug has to be accessible after installing the device.

Make sure that the power-cord is never crimped or damaged by sharp edges. Check the device and the power-cord from time to time.

Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.

This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.

The electric connection, repairs and servicing must be carried out by a qualified employee. Do not connect this device to a dimmer pack.

Do not switch the fixture on and off in short intervals as this would reduce the lamp's life.

During the initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective.

Do not touch the device's housing bare hands during its operation (housing becomes hot)! For replacement use lamps and fuses of same type and rating only.



2. Operating determination

This device is a moving head for creating decorative effects and was designed for indoor use only.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

Never run the device without lamp!

Do not shake the device. Avoid brute force when installing or operating the device.

Never lift the fixture by holding it at the projector-head, as the mechanics may be damaged. Always hold the fixture at the transport handles.

When choosing the installation-spot, please make sure that the device is not exposed to extreme heat, moisture or dust. There should not be any cables lying around. You endanger your own and the safety of others!

The minimum distance between light output and the illuminated surface must be more than 8 meters.

Make sure that the area below the installation place is blocked when rigging, derigging or servicing the fixture.

Always fix the fixture with an appropriate safety rope. Fix the safety rope at the correct holes only.

Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.

The lamp must never be ignited if the objective-lens or any housing-cover is open, as discharge lamps may explode and emit a high ultraviolet radiation, which may cause burns.

The maximum ambient temperature 45°C must never be exceeded.

CAUTION! The lens has to be replaced when it is obviously damaged, so that its function is impaired, e. g. due to cracks or deep scratches!

Operate the device only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the device. Most damages are the result of unprofessional operation!

CAUTION! The lamp has to be replaced when it is damaged or deformed due to the heat!


Please use the original packaging if the device is to be transported.

Please consider that unauthorized modifications on the device are forbidden due to safety reasons!


If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to dangers like short-circuit, burns, electric shock, burns due to ultraviolet radiation, lamp explosion, crash etc.

NOTE! If the lamp is off (and fixture is connected to mains), both colour wheels cannot be controlled by the control panel or DMX command. To control them, switch the lamp on.

3. Fixture exterior view

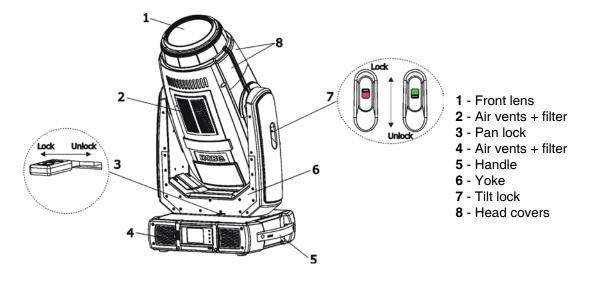


The head should be locked for transportation - the tilt lock (7) and the pan lock (3) have to be in the locked positions. To unlock the head, move these latches to unlock positions before operating the fixture.

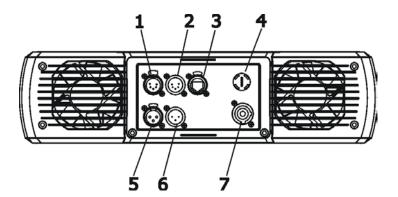

Rear panel of the base:

- 1 DMX output (5-pin XLR)
- 2 DMX input (5-pin XLR)
- 3 Ethernet input (RJ45)
- 4 Fuse holder
- 5 Power switch
- 6 DMX output (3-pin XLR)
- 7 DMX input (3-pin XLR)
- 8 Power input (Neutrik PowerCon)

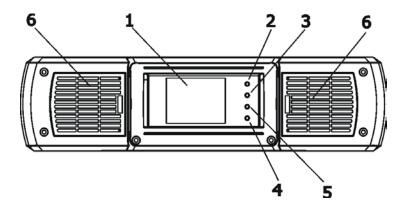

Front panel of the base:

- 1 Touch screen
- 2 ESCAPE button
- 3 NEXT button
- 4 PREVIOUS button
- 5 ENTER/DISPLAY ON button
- 6 Dust filters

The ENTER/DISPLAY ON button also serves for switching the display on when the fixture is disconnected from the mains.



Fixtures must be installed by a Qualified electrician in accordance with all national and local electrical and construction codes and regulation.

4.1 Connection to the mains

For protection from electric shock, the fixture must be earthed!

The Robin BMFL Spot is equipped with auto-switching power supply that automatically adjusts to any 50-60Hz AC power source from 200-240 Volts. The fixture is protected by one 15 A blow primary fuse.

If you install a cord cap on the power cable to allow connection to power outlets, install a grounding-type (earthed) plug, following the plug manufacturer's instructions.

To apply power, first check that the head pan and tilt locks are released.

The cores in the power cable are coloured according to the following table.

Core (EU)	Core (US)	Connection	Plug Terminal Marking
Brown	Black	Live	L
Light blue	White	Neutral	N
Yellow/Green	Green	Earth	

The earth has to be connected!

If you have any doubts about proper installation, consult a qualified electrician.

Do not connect the fixture to a dimmer system!


4.2 Installing the lamp

DANGER ! Install the lamp with the device switched off only. Unplug from mains before !

To insert the new lamp.


1. Disconnect the fixture from power and allow it to cool at least 20 minutes.

- 2. Make sure that the fixture's head is in the position as shown on the picture (notices on the lamp cover are in a readable position) .Loosen the three quarter-turn fasteners (1) on the lamp cover to open this cover.
- 3. Holding the lamp by its ceramic base, carefully turn the lamp to the left to loosen the lamp from the lamp holder. Gently pull the lamp out of the lamp holder

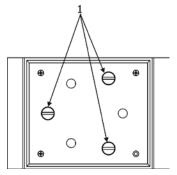

4. Holding the new lamp by its ceramics base and keeping its orientation as shown at the picture below, gently insert the lamp to the lamp holder and turn its base to the right until two lamp electrodes snap into slots in the lamp holder. Make sure that the lamp is installed tightly into the lamp socket. Do not install a lamp with a higher wattage! A lamp like this generates temperatures the device is not designed for. Damages caused by non-observance are not subject to warranty. Please follow the lamp manufacturer's notes! Do not touch the glass bulb bare hand during the

- installation! 5. Re-insert the lamp cover and tighten the three quarter-turn fasteners (1).
- 6. Switch on the fixture.
- 7. Align the lamp (see instructions below)
- 8. Reset the "Lamp On Time" and "Lamp Strikes" counters in the menu "Information".

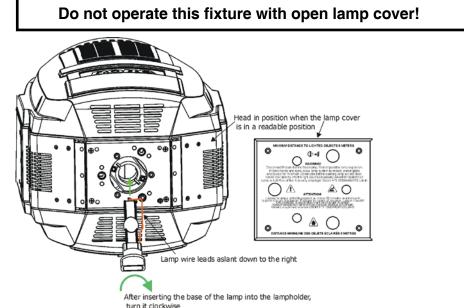


4.3 Lamp adjustment

The lamp holder is aligned at the factory. Due to differences between lamps, the fine adjustment may improve light performance:

To adjust the lamp in the fixture.

- 1. Switch on the fixture and after its reset turn on the lamp.
- 2. Go to the "Service" menu and select the item "Adjust Lamp" to project the light beam on the wall.
- 3. Use items in this menu to focus the light beam
- 4. Turn adjustment screws (2) one after another until you center the hot spot (the brightest part of the beam) and reach a max. light intensity at desired light distribution.

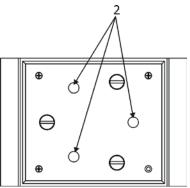


4.4 Replacing colour filters

Install colour filters with the device switched off only. Unplug from mains before!

Colour filters

- 1. Disconnect the fixture from mains and allow it to cool 10 minutes.
- 2. Remove the plastic cover of the head by loosening the 4 quarter-turn fasteners on the cover.
- 3. Turn the colour wheel 2 (the colour wheel more closely to the lamp) to the suitable position. The dichroic filters are fixed on the colour wheel by the magnets.
- 4. Release the dichroic filter (1) from the colour wheel 2 by inclining it from its position to break the power of the magnet. Protect the glass filter with a piece of paper or clout.
- 5. Insert a new dichroic filter into the colour wheel 2.
- 6. Place the top cover back before applying power.

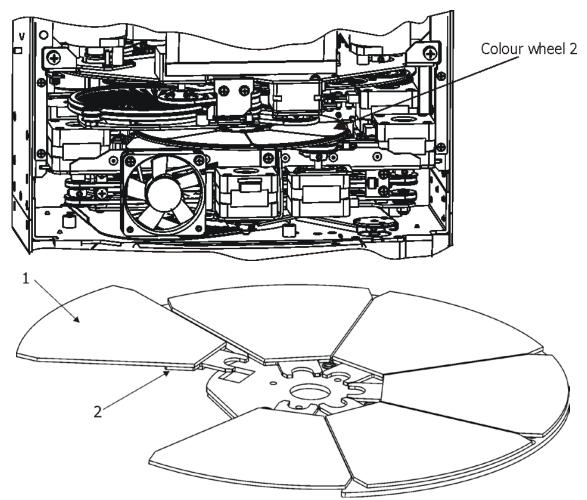

4.5 Replacing rotating gobos

Install gobos with the device switched off only. Unplug from mains before!


To replace rotating gobos.

- 1. Disconnect the fixture from mains and allow it to cool for 10 minutes .
- 2. Remove the plastic cover of the head by loosening the 4 quarter-turn fasteners on the cover.
- 3. Gently pull up the gobo holder (3) from the rotation gobo wheel.
- 4. Remove the spring lock (1) with an appropriate tool (e.g. small-bladed screwdriver) and remove it. Do not touch the surface of the pattern of the glass gobo with bare fingers.
- 5. Remove the original gobo (2) and insert the new one (glazy side towards the lamp).
- The Robe gobo has a small position point (8) at its edge which has to aimed at the position point (4) on the gobo holder (4). Insert the spring lock to secure correct gobo position in the gobo holder.
- 6. Insert he gobo holder back under the distance slots (6, 7) into rotating gobo wheel in this way, that its position point (4) has to aimed at a small toothlike projection (5) on the edge of the rotating gobo wheel.

Important! When inserting the gobo holder back to the rotating gobo wheel, one of the adjacent gobo holder has to be oriented according to the same rule, it means that its position point (4) has to aimed at the toothlike projection (5) on the edge of the rotating gobo wheel. You have keep both marks (4) and (5) side by side when rotating the gobo wheel to the position allows inserting the gobo holder back.

- 5. Replace the plastic cover before applying power.
- 6. Use the menu Service to fine adjust replaced gobo (Service -> Calibration -> Calibrate effects -> R. Gobo Index 1/1....1/6 or R. Gobo Index 2/1....2/6).

Note. The magnet (9) of the gobo holder has the same function as the position point (4) on the rest of gobo holders.

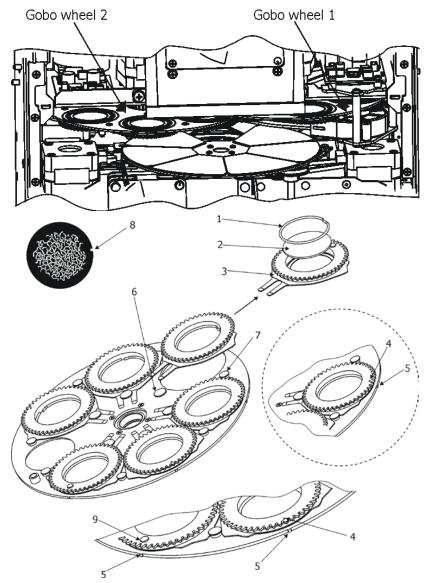



4.6 Replacing graphic wheels

Install graphic wheels with the device switched off only. Unplug from mains before!

The dual graphic wheel consists of two graphic wheels.

- To replace graphic wheels.
- 1. Disconnect the fixture from mains and allow it to cool.
- 2. Remove the plastic cover of the head by loosening the 4 quarter-turn fasteners on the cover.
- 3. Unscrew both screws (1) to remove the sensor holder.
- 4. Tilt up the dual graphic wheel to the position when graphic wheels are accessible.
- 5. Remove the spring lock (2) with an appropriate tool (e.g. small-bladed screwdriver) and remove it.
- 6. Remove the graphic wheel (3) and insert the new one (glazy side towards the lamp, black side towards the objective!). Insert the spring lock to secure it in the graphic wheel holder.
- 7. Use the same steps (4-6) to change the second graphic wheel.
- 8. Screw the sensor holder back to the fixture chassis.
- 9. Put the bottom cover back before applying power.

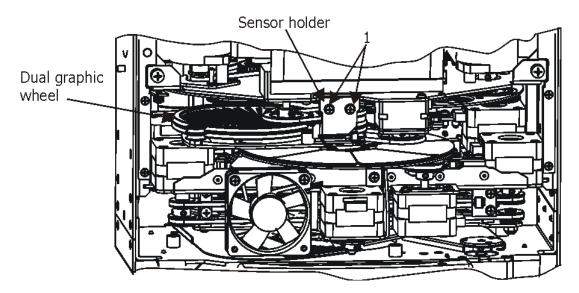

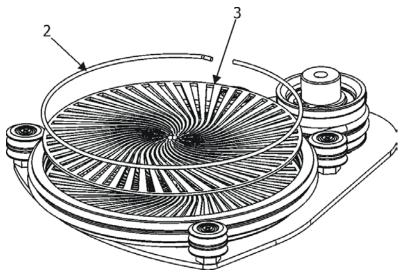

4.7 Rigging the fixture

A structure intended for installation of the fixture(s) must safely hold weight of the fixture(s) placed on it. The structure has to be certificated to the purpose.

The fixture (fixtures) must be installed in accordance with national and local electrical and construction codes and regulation.

For overhead installation, the fixture must be always secured with a safety wire

When rigging, derigging or servicing the fixture staying in the area below the installation place, on bridges, under high working places and other endangered areas is forbidden.

The operator has to make sure that safety-relating and machine-technical installations are approved by an expert before taking into operation for the first time and after changes before taking into operation another time.

The operator has to make sure that safety-relating and machine-technical installations are approved by a skilled person once a year.

Allow the fixture to cool for ten minutes before handling.

The projector should be installed outside areas where persons may walk by or be seated.

IMPORTANT! OVERHEAD RIGGING REQUIRES EXTENSIVE EXPERIENCE, including calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the projector. If you lack these qualifications, do not attempt the installation yourself, but use a help of professional companies.

CAUTION: Fixtures may cause severe injuries when crashing down! If you have doubts concerning the safety of a possible installation, do not install the fixture!

The fixture has to be installed out of the reach of public.

The fixture must never be fixed swinging freely in the room.

Danger of fire !

When installing the device, make sure there is no highly inflammable material (decoration articles, etc.) in a distance of min. 1 m.

The minimum distance of 8 meters between light output from the moving head and the lit objects must be kept!


CAUTION!

Use 2 appropriate clamps to rig the fixture on the truss. Follow the instructions mentioned at the bottom of the base. Make sure that the device is fixed properly! Ensure that the structure (truss) to which you are attaching the fixtures is secure.

The fixture can be placed directly on the stage floor or rigged in any orientation on a truss without altering its operation characteristics .


For securing a fixture to the truss, install a safety wire that can hold at least 10 times the weight of the fixture. Use only the safety wire with screw-on carabine. Pull the safety wire through the safety attachment point on the bottom of the base and around the truss.

Omega holders positions:

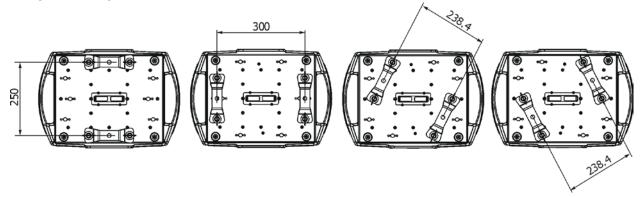

Truss installation

- 1. Bolt each clamp (1) to the omega holder (2) with M12 bolt and lock nut through the hole in the holder.
- **2.** Fasten the omega holders to the bottom of the base by inserting both quick-lock fasteners (3) into the holes of the base and tighten fully clockwise.
- **3**. Pull the safety wire (4) around the truss (6) and lock the screw-on carabine through attachment point (5). Besides this securing, we recommend to pull the safety wire (4) also through the handle (7) or to use another safety wire for pulling through the handle and the truss as shown on the picture below.
- 4.Clamp the fixture on a truss and tighten the rigging clamps.

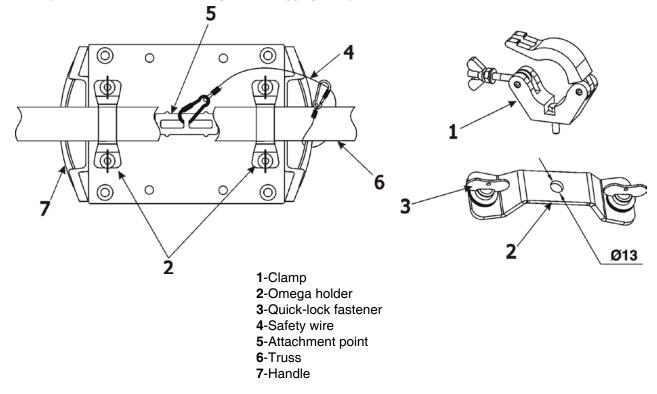

When installing fixtures side-by-side, avoid illuminating one fixture with another!

DANGER TO LIFE! Before taking into operation for the first time,the installation has to be approved by an expert!

4.8 DMX-512 connection

The fixture is equipped with both 3-pin and 5-pin XLR sockets for DMX input and output. The sockets are wired in parallel.


Only use a shielded twisted-pair cable designed for RS-485 and 3-pin or 5-pin XLR-plugs and connectors in order to connect the controller with the fixture or one fixture with another.

DMX - output



If you are using the standard DMX controllers, you can connect the DMX output of the controller directly with the DMX input of the first fixture in the DMX-chain. If you wish to connect DMX controllers with other XLR outputs, you need to use adapter cables.

Building a serial DMX-chain:

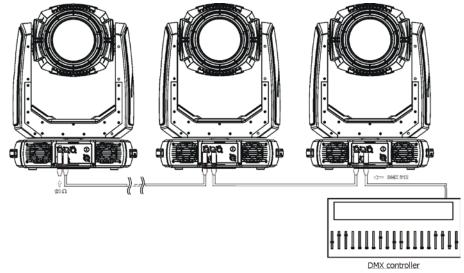

Connect the DMX-output of the first fixture in the DMX-chain with the DMX-input of the next fixture. Always connect one output with the input of the next fixture until all fixtures are connected.

Caution: At the last fixture, the DMX-cable has to be terminated with a terminator. Solder a 120 Ω resistor between Signal (-) and Signal (+) into a 3-pin (5-pin) XLR-plug and plug it in the DMX-output of the last fixture.


4.9 Ethernet connection


The fixtures on a data link are connected to the Ethernet with ArtNet communication protocol. The control software running on your PC (or light console) has to support Art-Net protocol.


Art-Net communication protocol is a 10 Base T Ethernet protocol based on the TCP/IP.Its purpose is to allow transfer of large amounts of DMX 512 data over a wide area using standard network technology.


IP address is the Internet protocol address. The IP uniquely identifies any node (fixture) on a network. **The Universe** is a single DMX 512 frame of 512 channels.

The Robin MMX Spot is equipped with 8-pin RJ- 45 socket for Ethernet input.Use a network cable category 5 (with four "twisted" wire pairs) and standard RJ-45 plugs in order to connect the fixture to the network.

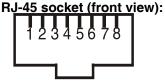

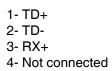

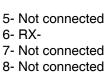

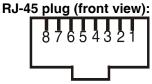

Patch cables that connect fixtures to the hubs or LAN sockets are wired 1:1, that is, pins with the same numbers are connected together:

	1-1	2-2	3-3	4-4	5-5	6-6	7-7	8-8	
lf on	y the fixtu	re and t	he comp	outer are	to be ir	nterconne	ected,no	hubs or	other active components are needed.
A cro	ss-cable	has to b	e used:						

1-3 2-6 3-1 4-8 5-7 6-2 7-5 8-4	100	33 Cabic	1103 10 1	ic useu.						
		1-3	2-6	3-1	4-8	5-7	6-2	7-5	8-4	

If the fixture is connected with active Ethernet socket (e.g. switch) the network icon ____ will appear at the bottom right corner of the screen:



Direct Ethernet operation

Connect the Ethernet inputs of all fixtures with the Ethernet network.

Option "Artnet" (gMal or gMA2 or sACN) has to be selected from "Ethernet Mode" menu at each fixture. Set IP address (002.xxx.xxx.xxx / 010.xxx.xxx) and the Universe at each fixture.

An advised PC setting: IP address: 002.xxx.xxx./010.xxx.xxx.xxx (Different from fixture IP addresses) NET mask: 255.0.00


Ethernet / DMX operation

Option "Artnet" (gMal or gMA2 or sACN) has to be selected from "Ethernet Mode" menu at first fixture.

Option "Ethernet To DMX" has to be selected from the "Ethernet Mode" menu at the first fixture (connected to the Ethernet) in the fixture chain, next fixtures have standard DMX setting.

Connect the Ethernet input of the first fixture in the data chain with the network. Connect the DMX output of this fixture with the input of the next fixture until all fixtures are connected to the DMX chain.

Caution: At the last fixture, the DMX chain has to be terminated with a terminator. Solder a 120 Ω resistor between Signal (–) and Signal (+) into a XLR-plug and connect it in the DMX-output of the last fixture.

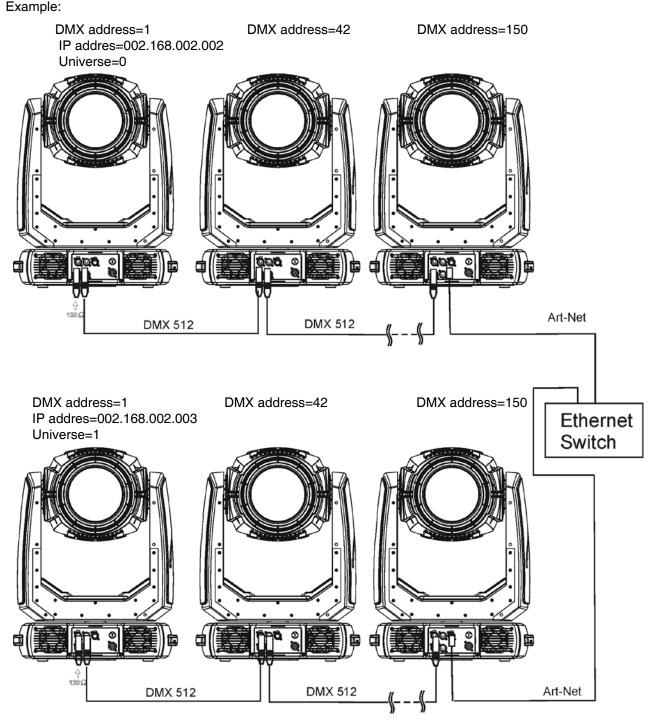

5. Remotely controllable functions

Lamp

The OSRAM HTI 1500 W/60/P28 Lok-it! is a highly efficient, single-ended short-arc metal halide lamp with 6000 Kelvin colour temperature. The new Lok-it! plug'n'play system allows a quick one-touch lamp replacement.

The fixture allows three levels of the lamp power: 1500W, 1700W and Silent (silent mode - the lamp power is auto-controlled to ensure minimum noise of fixture fans).

Note: It is also important to note, that the discharge lamp is a cold restrike type, that means, that the lamp has to be cold before re-striking. For this reason, you have to wait a while after having switched the lamp off before you can switch it on again.

Colour wheel 1

This wheel contains 6 dichroic filters + open. The colour wheel can be positioned between two adjacent colours in any position. It is also possible to rotate the colour wheel continuously at different speeds ("Rainbow effect" in both directions).

Colour wheel 2

This wheel contains 6 replaceable 'SLOT&LOCK' dichroic filters + open. The colour wheel can be positioned between two adjacent colours in any position. It is also possible to rotate the colour wheel continuously at different speeds ("Rainbow effect" in both directions).

CMY+CTO colour mixing system

The CMY color mixing system is based on graduated cyan, magenta, and yellow colour filters. A continuous range of colors may be achieved by varying the amount of each filter from 0 to 100%.

Dual graphic wheel

The wheel consists of 2 graphic wheels rotating in both directions with variable speed which create wide spectrum of graphic effects. 30 animation macros in relation to focus channel allows to set many new images.

Rotating gobo wheels

The fixture includes 2 rotating gobo wheels. Each rotating gobo wheel includes 6 gobos rotating in both directions, indexable, replaceable "SLOT&LOCK" glass gobos + open position. Gobo positioning and gobo selection speed is available as well as a gobo-shake function.

Prism

Two rotating prisms (6-facet linear, 6-facet axial) with continuous rotation in both directions. 16 prism/gobo macros available.

Frost

Frost module provides 3 types of variable frosts: light, medium and heavy.

Iris

Motorized adjustable iris, wide range of variable pulse effects.

Zoom

Motorized zoom unit enables zoom between 5 °- 55° (open hole); $5^{\circ} - 48^{\circ}$ (gobo).

Focus/Autofocus

Motorized focus allowes to focus beam from approx. 5 metres to infinity.

Special function autofocus allows to keep focused image during zooming .

Shutter unit


This unit is used for strobe effects with variable speed.

Dimmer unit

Smooth 0 - 100 % dimming is provided by the mechanical dimmer unit.

Pan/Tilt

Fast pan/tilt movement due to built-in electronic motion stabilizer. The electronic motion stabilizer ensures precise position of the fixture's head during its movement and reduces its swinging when the truss shakes.

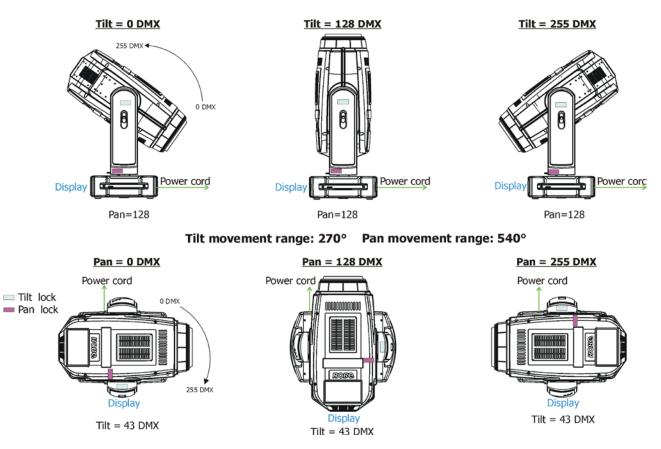

6. Control menu map

Default settings=Bold print

Tab	Level 1	Level 2	Level 3	Level 4	Level 5	Level 6
Addressing	DMX Address	001-255				_
	DMX Presets	Mode 1				_
	DMXTTesets	Mode 1 Mode 2		1		_
						_
	Eth ann at O attin an	View Selected Preset	Disable			
	Ethernet Settings	Ethernet Mode	Disable			
			ArtNet	1		
			gMAI			
			gMA2			
			sACN			
		Ethernet To DMX	Off, On			-
	_	IP Address/Net Mask	Default IP Address		_	
	_		Custom IP Address		_	
	_		Net Mask		_	
	_	ArtNet Universe	0-255		_	
	_	MANet settings	MANetl/II Universe	01-256		
			MANet Session ID	01-32		
		sACN Settings	sACN Universe	00001-32000		
			sACN Priority	0-255		
Information	Fixture Times	Power On Time	Total Hours			
(F)			Resetable Hours			
		Lamp On Time	Total Hours			
			Resetable Hours			
		Lamp Strikes	Total Strikes			
			Resetable Strikes			
		Air Filters	Elapsed Time			
			Alert Period	10-300		
	Fixture Temperatures	Head Temperature	Current			
			Maximum NonRes.			
			Maximum Res.			
		Ambient Temperature	Current			
			Maximum NonRes.			
			Maximum Res.			
		Base Temperature	Current			
			Maximum NonRes.			
			Maximum Res.			
	DMX Values	Pan				
		:				
		Dimmer Fine				
	Wireless State	Signal Quality				
		Unlink Wireless Adapter		1		
	Power Channel State					
	Software Versions	Display System				
		Module M				
		Module G		1		1
		Module P				1
		Module O	Ì			1
		Module I				
		Module C		1		1
		Module D		1		1
		Module S	1	1		1

Tab	Level 1	Level 2	Level 3	Level 4	Level 5	Level 6
		Wireless				
	Product IDs	Mac Address				
		RDM UID				
		RDM Label				
	View Logs	Fixture Errors				
		Fixture States	Power On			
			Power Off			
			Lamp On			
			Lamp Off			
			Lamp On			
			Lamp Off			
		Fixture Position				
		Fixture Temperatures	Head Temperature			
			Ambient Temperature			
			Base Temperature			
Personality	User Mode	User A Settings				
×		User B Settings				
		User C Settings				
	DMX Presets	Mode 1				
		Mode 2				
		View Selected Preset				
	DMX Input	Wired input				
		Wireless input				
		Wireless In/XLR Out				
	Pan/Tilt Settings	Pan Reverse	Off, On			
		Tilt Reverse	Off, On			
		Pan/Tilt Feedback	Off, On			
		Pan/Tilt mode	Time			
			Speed			
	Pan/Tilt EMS	On , Off				
	Follow Spot Mode	On, Off				
	Microphone Sen- sitivity					
	Blackout Settings	Blackout During M.C.	Off, On			
		Blackout while:	Pan/Tilt moving	Off, On		
			Colour Wheel Moving	Off, On		
			Gobo Wheel Moving	Off, On		
	Init Effect Positions	Pan	0-255			
		:	ļ	ļ	ļ	
		Dimmer Fine	0-255	ļ	ļ	
	Screen Settings	Display Intensity	1-10	ļ	ļ	
		Screen Saver Delay	Off-10min.	ļ	ļ	
		Touchscreen Lock	Off-10min.	ļ	ļ	
		Recalibrate Touchscreen		ļ		
		Display Orientation	Normal	ļ		
		ļ	Inverted	ļ	ļ	
			Auto	ļ		
	Temperature Unit	°C,°F			ļ	
	Fan Mode	Auto		ļ		
		High			ļ	
	Dimmer Curve	Linear			ļ	
		Square Law				
	Date & Time Settings					

Tab	Level 1	Level 2	Level 3	Level 4	Level 5	Level 6
	Password Protection	Off, On				
Manual Control	Reset Functions	Total System Reset				
£		Pan/Tilt reset				
		Colour System Reset				
		Gobo System Reset				
		Dimmer./Strobe.				
		Optics./Prism/Frost Res.				
		Iris/Dual G. Wheel Reset				
	Preset Effect Con- trol	Pan	Position 1-Position 5			
		:				
		Dimmer	Position 1- Position 5			
	Manual Effect Con- trol	Pan	0-255			
		:				
		Dimmer Fine	0-255			
Stand -Alone	Test Sequences	Dynamic Mode				
<u>i i i i i i i i i i i i i i i i i i i </u>	1	Static Mode	Pan	0-255		
			Tilt	0-255		
	1	1	Zoom	0-255		
			Focus	0-255		1
			HotSpot	0-255		
	MusicTrigger	Off, On				1
	Preset Playback	None				1
		Test			1	1
	1	Prg. 1				1
	1	Prg. 2				1
		Prg. 3				I
	Play Program	Play Program 1				1
	l lay riogram	Play Program 2				
		Play Program 3				1
	Edit Program	Edit Program 1	Start Step	1-100	 	
	Luit Flogram	Luit Flogram	End Step	1-100		
			Edit Program Steps	Step 1	Pan	0-255
			Euit Flogram Steps			0-200
				:	:	0.055
				:	Dimmer Fine	0-255
				:	Step Time	0-25,5 sec.
				Step 100	Pan	0-255
	+	<u> </u>	<u> </u>	<u> </u>	: Dimmor Fino	0-255
	+	<u> </u>	<u> </u>	<u> </u>	Dimmer Fine	4
Sonico		Ban	0-255	<u> </u>	Step Time	0-25,5 sec.
Service	Adjust DMX Values	Pan	0-200			
-		: Dimmer Fine	0-255			<u> </u>
,	Adjust Lamp	Pan	0-255		<u> </u>	<u> </u>
		:	V-200			<u> </u>
	+		0-255			<u> </u>
	Calibrations	Focus Calibrate Effects	0-255	0-255		
	Calibrations		Pan	0-200		
			:	0.055		<u> </u>
	1		Dffusor	0-255		
	<u> </u>	Calibrate Pan/Tilt EMS.				ļ
		Load Default Calibra- tions				
	Update Software					1
						1
	Į			ļ	1	

7. Control menu

The Robin BMFL Spot is equipped with the QVGA Robe touch screen with battery backup which allows to set the fixture's behaviour according to your needs, obtain information on its operation, test its various parts and lastly program it, if it has to be used in a stand-alone mode.

The fixture's menu can be controlled either by the control buttons or directly by touching the icon.

Control buttons on the front panel:

RNS2 ROBE NAVIGATION SYSTEM 2		ROBE Innovative Concept
BABA®		
ROB _e . [®]		

[ESCAPE] button used to leave the menu without saving changes.

[NEXT], [PREV] buttons for moving between menu items and symbols, adjusting values. [ENTER/Display On] button used to enter the selected menu (menu item) and to confirm adjusted value. If the fixture is disconnected from mains, the button switches the touch screen on.


Icons used in the touch screen menu:

- [back arrow] used to move back to the previous screen (menu).
- [up arrow] used to move up on the previous page.
- [down arrow] used to move down on the next page.
- Iconfirm] used to save adjusted values, to leave menu or to perform desired action.
- Cancel] used to leave menu item without saving changes.
- [confirm+copy] used to save adjusted values and copy them to the next prog. step.
- [warning icon] used to indicate some error which has occurred in the fixture.
- 💡 [lamp menu] used to switch on/off the lamp and to set lamp functions.
- [Ethernet] used to indicate Ethernet connected.
- 🔄 [display turn] used to turn the display by 180°.
- [™] [slider control] used to recall slider system for setting desired value.
- [keyboard control] used to recall keyboard system for setting desired value.
- 🛞 [air filters cleaning] used to signal that cleaning period of the air filters elapsed.

The menu page displays icons for each function that you can perform from the touch screen.

The menu page displays icons for each function that you can perform from the touch screen.

After switching the fixture on, the touch screen shows the screen with the ROBE logo:

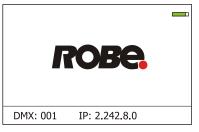

<u>Note:</u> The green icon at the top right corner of the screen indicates the level of the display battery charging. If the whole icon is green, the battery is fully charged while the red icon indicates exhausted battery. The battery charges during fixture operation, its charging lasts cca 6 hours.

We recommend that the fixture should be in operation at least 7 hours per week to keep the battery fully charged.

If you switch the fixture on and this screen will not appear till 1 minute, switch the fixture off and on again. If the screen lights, the battery is exhausted. In case the screen still does not light, the battery is faulty.

This is also indicated by an error message "Faulty battery" and if such an error message appears the battery should be replaced immediately. The lifetime of the battery is highly dependent on ambient temperature (and consequently on base temperature). If the maximum ambient temperatures (as recorded and displayed in menu: Information -> Fixture Temperatures -> Ambient Temperature -> Maximum NonRes.) are kept within the specified limits, the battery should last for at least two years. Shell the ambient temperatures exceed the specified maximum temperature, the lifetime of the batteries could be considerably shortened even up to just one year or less and also result in physical damage (battery leakage) or unreliable fixture functions.

Damage caused by batteries failed due to exceeded maximum ambient temperature cannot be claimed under warranty terms.

Touch any part of the screen or press the [ENTER/Display On] button to display the initial screen with the current stored DMX address (and the end address for selected DMX mode):



Touch the green arrow at the bottom right corner of the screen or press the [ENTER/Display On] button to enter the "Address" menu.

An item (such as a Tab, menu item, text box, icon) may be selected from a screen by simply touching the item.

Before first fixture operation, set current date and time in the menu "Date &Time Settings" (menu path: Personality--> Date &Time Settings).

7.1 Tab " Address"



DMX Address - Select the menu to set the DMX start address.

DMX Preset - Use the menu to select desired channel mode.

Mode 1 - 41 control channels

Mode 2 - 33 control channels

<u>View Selected Preset</u> - Use the menu to display channels included in the selected mode.

Ethernet Settings - The menu allows all needed settings for the Ethernet operation

Ethernet Mode

<u>Disable</u> - The option disables Ethernet operation. <u>Artnet</u> - Fixture receives Artnet protocol <u>gMAI</u> - Fixture receives MANet I protocol <u>gMA2</u> - Fixture receives MANet 2 protocol <u>sACN</u> - Fixture receives sACN protocol

<u>Ethernet To DMX</u> - Fixture receives protocol from the Ethernet input and sends DMX data to its DMX output (fixture works as an "Ethernet/DMX converter", next fixture can be connected to its DMX output and you can build a standard DMX chain by connecting another fixtures. Only one fixture has to be connected to the Ethernet.

<u>IP Address/Net Mask</u> - Select this menu to set IP address. IP address is the Internet protocol address. The IP uniquely identifies any node (fixture) on a network. There cannot be 2 fixtures with the same IP address on the network!

Default IP Address -Preset IP address, you can set up only first byte of IP address (2 or 10) e.g. **002**.019.052.086.

Custom IP Address - The option enables to set up all bytes of IP address. **Net Mask** - The option enables to set up all bytes of Net Mask.

<u>ArtNet Universe</u> - Use this item to set a Universe (0-255). The Universe is a single DMX 512 frame of 512 channels.

<u>MANet Settings</u> - Use this menu to set parameters for MANet operation. <u>MANet Universe I/II</u> - The value of this item can be set in range 1-256. <u>MANet Session ID</u> - The value of this item can be set in range 1-32.

<u>sACN Settings</u> - Use this menu to set parameters for sACN operation.

<u>sACN Universe</u> - The value of this item can be set in range 1-32000. **<u>sACN Priority</u>** - The value of this item can be set in range 0-255.

7.2 Tab "Information"



<u>Fixture Times</u> - The menu provides readouts of fixture and lamp operation hours.

Power On Time Hours - Select this menu to read the number of fixture operation hours.

Total Hours - The item shows the total number of the operation hours since the Robin BMFL Spot has been fabricated.

<u>Resetable Hours</u> - The item shows the number of the operation hours that the Robin BMFL Spot has been powered on since the counter was last reset.

In order to reset this counter to 0, touch the text box next to the item "Resetable Hours:" **Lamp On Time Hours** - Select this menu to read the number of the operation hours with the lamp on.

<u>Total Hours</u> - The item shows the total number of the operation hours with the lamp on since the Robin BMFL Spot has been fabricated.

<u>Resetable Hours</u> - The item shows the number of the operation hours with the lamp on that the Robin BMFL Spot has been powered on since the counter was last reset. In order to reset this counter to 0, touch the text box next to the item "Resetable Hours:"

Lamp Strikes - Select this menu to read the number of lamp strikes.

Total Strikes - The item shows the total number of the lamp strikes since the Robin BMFL Spot has been fabricated.

<u>Resetable Strikes</u> - The item shows the number of the lamp strikes since the counter was last reset.

In order to reset this counter to 0, touch the text box next to the item "Resetable Strikes:"

<u>Air Filters</u> - Regular cleaning of the air filters is very important for the fixture's life and performance. Bild-up of dust, dirt and fog fluid residues reduces the fixture's light output and cooling ability. The two items of this menu help you to keep cleaning period of the air filters. <u>Alert period</u> - Cleaning schedule for the fixture depends on the operating environment. It is therefore impossible to specify accurate cleaning interval. This item allows you to change the cleaning interval of the air filters. This "alert" value is 300 hours and it is set as default. Inspect the fixture within its 300 hours of operation to see whether cleaning is necessary. If cleaning is required, clean all air filters and change the value in this menu on acceptable level. Min. level of alert period is 10 hours, max. is 300 hours.

<u>Elapsed Time</u> - The item allows you to read the time which remains to cleaning air filters. The time period is set in the menu mentioned above.

Expired time period is signalled by a negative mark (-) at the time value and a warning icon on the display.

Clean the filters and reset this menu item (by touching the text box next to the item "Elapsed Time").

<u>Fixture Temperatures</u> - The menu is used to view temperatures of the fixture's inside.

Head Temperature - The menu shows temperatures in the fixture head near the lamp.

<u>Current</u> - A current temperature of the fixture head.

<u>Maximum NonRes.</u> - A maximum temperature of the fixture head since the fixture has been fabricated.

Maximum Res. - A maximum temperature of the fixture head since the counter was last reset.

In order to reset this counter to 0, touch the text box next to the item "Maximum Res." **Note:** if the "Head Temperature" exceeds 115°C, the lamp will be switched off.

<u>Base Temperature</u> - The menu shows temperature in the fixture base (on the display PCB). <u>Current</u> - A current temperature in the fixture base.

<u>Maximum NonRes.</u> - A maximum temperature in the fixture base since the fixture has been fabricated.

Maximum Res. - A maximum temperature in the fixture base since the counter was last reset.

In order to reset this counter to 0, touch the text box next to the item "Maximum Res."

<u>Ambient Temperature</u> - The menu shows temperature of the induced air on the fan in the fixture base . <u>Current</u> - A current temperature of the induced air in the fixture base.

<u>Maximum NonRes.</u> - A maximum temperature of the induced air in the fixture base since the fixture has been fabricated.

Maximum Res. - A maximum temperature of the induced air in the fixture base since since the counter was last reset.

In order to reset this counter to 0, touch the text box next to the item "Maximum Res."

DMX Values - The menu is used to read DMX values of each channel received by the fixture.

<u>Wireless State -</u> The menu serves for reading of the wireless operation status <u>Unlink Wireless Adapter</u> - The menu item allows unlinking the fixture from the transmitter .

Power Channel State - The menu item shows state of the Power/Special functions switches.

Software Version - Select this item to read the software version of the fixture modules:

<u>**Display System</u>** - A display processor on the display board in the fixture base <u>**Module M**</u> - A pan/Tilt</u>

Module G - A rot. gobo wheel 1, animation wheel rotation

- Module P A prism, frost
- Module O A zoom, focus

Module I - An iris, gobo wheel 2, animation wheel

Module C - A CMY+CTO module

Module D - A dimmer, lamp fans

Module S - A shutter, colour 1 and colour 2

Product IDs - The menu is used to read the MAC Address ,RDM UID and RDM Label.

<u>View Logs</u> - Use this menu to read fixture's data which have been recorded during fixture operation. This collected data allows easier troubleshooting.

<u>Fixture Errors</u> - Use this menu to read fixture errors which have occurred during fixture operation. There is a list of error messages:

Pan Error	Prism Error
Tilt Error	Prism Rotation Error
Dimmer 1 Error	Frost Error

Dimmer 2 Error Colour Error Yellow Error Gobo Error Gobo Carousel Er Static Gobo Error Focus Error Zoom Error	ror	Cyan Error Magenta E CTO Error Clean Air F Iris Errors Active Lam Lamp Error Temp. Sen	rror Filters Ip Timer rs r		
Base Overheated					
	Recorded followii <u> 1</u> - Recorded insta	•	re On, Fixture Off,	Lamp On, Lamp O	ff.
				Display	Display
Disp-FN	Disp-FI	Disp-ST	Disp-SB	Disp-T	Disp-B

Fixture Temperatures - Recorded temperatures which have exceeded defined levels.

Note: The log buffer can contain 8000 records max. If the buffer is full, old data will be overwritten.

7.3 Tab "Personality"



<u>User mode</u> - The Robin BMFL Spot allows you to recall up to the three user settings. After switching the fixture on for the first time, the User A settings is active. Now all changes made in the "Personality" menu, "Addressing" menu and the "Music Trigger" and " Preset Playback" items from the "Stand-alone" menu are saved to the User A settings. If you now select the User B settings, from this moment the changes made in these menus will be saved to the User B settings. After switching the fixture off and on, the User B setting is active. In this way you may use the 3 fixture operating behaviours.

<u>User A Settings</u> - the function recalls the user A settings. <u>User B Settings</u> - the function recalls the user B settings.

User C Settings - the function recalls the user C settings.

DMX Preset - Use the menu to select desired channel mode.

Mode 1 - 41 control channels

Mode 2 - 33 control channels

View Selected Preset - Use the menu to display channels included in the selected mode.

DMX Input- Use the menu to select mode of receiving DMX signal.

<u>Wired</u> - DMX signal is received by means of the standard DMX cable.

Wireless - DMX signal is received by means of the inbuilt wireless module.

Wireless In/XLR Out- the fixture receives wireless DMX and sends the signal to its wired DMX output.

The fixture behaves as "Wireless/Wired" adapter.

The options "Wired" and "Wireless" are also stated in DMX chart (channel Power/Special functions).

Pan/Tilt Settings - Use the menu set behaviour of both pan and tilt movements.

Pan Reverse - The item allows to invert pan movement.

<u>**Tilt Reverse**</u> - The item allows to invert tilt movement.

<u>Pan/Tilt Feedback</u> - The item allows to return the mowing head to the required pan/tilt position after changing the position by an external force if this option is set on.

Note. Be careful, the Pan/Tilt Feedback should be permanent On, the option Off is not suitable for standard operation and the head of the fixture can be damaged!

Pan/Tilt mode - Use this menu to set the mode of the pan/tilt movement

<u>Time mode</u> – The pan and tilt will move with different speeds and they will come at the same time to the end point of their tracks (pan and tilt use their optimal speeds).

Time of the pan/tilt movement (25.5 sec. max.) is set by the channel "Pan/Tilt speed, Pan/Tilt time".

Speed Mode - Both Pan and tilt will move with the same speed as adjusted at the channel "Pan/Tilt speed, Pan/Tilt time".

Pan/Tilt EMS - Built-in electronic motion stabilizer ensures precise position of the fixture's head during its movement and also reducing its swinging when the truss shakes.

Follow Spot Mode - If the function is On, the pan/tilt motors are deactivated and the head can be controlled manually.

<u>Microphone Sensitivity</u> - Enter the menu if you want to adjust the microphone sensitivity from 1 (max.) to 20 (min.).

<u>Blackout Settings</u> - Use the menu if you need to close the light output under certain conditions which are described below

Blackout DMC - Blackout during movement correction. Set this option On if you wish to close light output during the time when the head goes to its correct position, which has been changed by an external force.

<u>Active Blackouts</u> - Use this menu if you wish to close the light output during effect changes.

Pan/Tilt Moving - The menu item enables to close light output while the pan/tilt coordinates are changing.

<u>Colour Wheel Moving</u> - The menu item enables to close light output while the colour wheel is moving.

<u>Gobo Wheel Moving</u> - The menu item enables to close light output while the rot. gobo wheel is moving.

Init Effect Positions - Use the menu to set all effects to the desired positions at which they will stay after switching the fixture on without DMX signal connected.

<u>Screen Settings</u> - Use this menu to change the touch screen settings.

Display Intensity - The item allows to control the intensity of the screen (1-min., 10-max.).

<u>Screen saver Delay</u> - The item allows you to keep the screen on or to turn it off automatically after 1-10 minutes after last touch (or pressing any button on the control panel).

<u>Touchscreen Lock</u> - The item allows you to lock the screen after last touch (or pressing any button on the control panel). The time delay can be set in range of 1-10 minutes. To unlock the screen, press the [ENTER/Display On] button.

Recalibrate Touchscreen - The item starts calibration of the touchscreen. Follow the instructions on the screen.

Display Orientation - The menu allows to change display orientation.

Normal - Standard display orientation if the fixture is placed horizontally (e.g. on the ground).

Inverted - Inverted orientation (needed if the fixture is hanging on the truss).

<u>Auto</u> - The option activates a gravitation sensor for automatic screen orientation.

Note: **Auto** option is set as default. You change the display orientation by touching the icon is on the display, an the option set in the "Display Orientation" menu is temporarily overriden.

<u>Temperature unit</u> - Use the menu item to change temperature unit from °C to °F.

<u>Fan Mode</u> - Use the menu to set the fixture fans to max. power mode ("High") or to auto-control mode ("Auto").

Dimmer Curve - You can select desired dimmer curve: Linear or Square Law.

<u>Date & Time Settings</u> - Use this menu to set current date and time for the fixture log system (menu "**View Logs**"). Set this menu item before first fixture operation.

Default Settings - The menu item allows to set all fixture parameters to the default (factory) values.

Password Protection - allows to enter password in order to prevent unauthorized person from changing setting of the fixture.

7.4 Tab "Manual Control"



 Reset Functions - The menu allows to reset the fixture either per function modules or all modules together.

 Total System Reset</u> - The item resets all function modules.

 Pan/Tilt Reset</u> - The item resets a pan and tilt movement.

 Colour System Reset</u> - The item resets a colour wheels and CMY/CTO flags.

 Gobo System Reset</u> - The item resets rotating gobo wheels.

 Dimmer/Strobe Res.</u> - The item resets strobe and shutter lamellas .

 Optics/Prism/Frost Reset
 - The item resets a zoom, focus, prism and a frost module.

 Iris/Dual G. Wheel Res.
 - The item resets an iris and dual graphic wheel module.

Manual Effect control - Use the menu to control all fixture channels by means of the control panel.

7.5 Tab "Stand-alone"



<u>Test Sequences</u>-Use the menu to run a test/demo sequences without an external controller, which will show you some possibilities of using Robin BMFL Spot.

Dynamic Mode - This mode uses all Robin BMFL Spot functions including pan/tilt movement and therefore is good for a complete introduction of the fixture.

<u>Static Mode</u> - This mode is suitable for projections on the wall, ceiling or ground without any pan/tilt movement. Adjust the pan, tilt, zoom, focus and hot-spot to desired positions an start test sequences by touching the green \blacktriangleright icon.

Music Trigger - Use the item to activate the sound control of the running program via the built-in microphone.

<u>Preset Playback</u> - This menu allows you to select the program which will be played in a loop after switching the fixture on (the option is commonly used in a stand-alone operation without an external controller).

None - The option disables "Presetting playback" function.

Test - The option starts the test sequences.

<u>Prog. 1</u> - The option starts user program No. 1.

<u>Prog. 2</u> - The option starts user program No. 2.

Prog. 3 - The option starts user program No. 3.

<u>**Play program**</u> - Use the menu to run desired program in a loop.

Play Program 1 - The option starts user program No.1.

Play Program 2 - The option starts user program No. 2.

Play Program 3 - The option starts user program No. 3.

<u>Edit Program</u> - Use the menu to create or to edit desired program. The Robin BMFL Spot offers 3 free programs, each up to 100 steps.

Edit Program 1 - The option allows to edit user program No.1.

Edit Program 2 - The option allows to edit user program No.2.

Edit Program 3 - The option allows to edit user program No.3

To edit program:

1. Touch the item which you want to edit ("Edit Program 1" - "Edit Program 3").

- 2. Touch the item "Edit Program Steps".
- 3. Touch the item "Step 1".

4 From the list of effects touch desired effect and set its value. Browse throw the list by touching the [up arrow] and [down arrow] and set all desired effects.

An item "Step Time" (value of 0-25.5 sec.) is the time during which effects last in the current step 5. Save adjusted effects to the current step by touching the [confirm] or save and copy them to the following step by touching the [confirm+copy]. By touching the text box "Preview" next to the current program step you can view created scene.

6. Repeat the steps 4 and 5 for next program steps.

7. After editing desired program steps, adjust the length of the program by touching the text boxes "Start Step" and "End Step".

Meaning of the icons used in the "Edit Program" menu:

- 🖡 moves down on the next page 💫 🗸 saves adjusted values and leaves menu
- 👃 moves up on the previous page
- saves adjusted values and leaves menu
 saves values to the current step and copy them to the following prog. step

X - leaves menu without saving values

There is a chart describing behaviour of items "Pan/Tilt Macro" and "P./T. Macro Speed".

DMX	Pan/Tilt Macro
0 - 9	Disabled pan/tilt macro
10 - 31	Reserved
32 - 63	Figure of circle (from small to large)
64 - 95	Figure of horizontal eight (from small to large)
96 - 127	Figure of vertical eight (from small to large)
128 - 159	Figure of rectangle (from small to large)
160 - 191	Figure of triangle (from small to large)
192 - 223	Figure of star (from small to large)
224 - 255	Figure of cross (from small to large)
	Pan/Tilt Macro Speed
0	No macro generation
1 - 127	Macro generation from fast to slow-forwards
128 - 129	No macro generation
130 - 255	Macro generation from slow to fast-backwards

7.6 Tab "Service"



<u>Adjust DMX Values</u> - The menu allows you to set all effects to desired positions before fine calibration of the effects .

<u>Adjust Lamp</u> - This item opens the light output of the fixture and enables to focus the light beam on the wall to perform the fine lamp adjustment.

<u>Calibrations</u> - This menu enables fine calibration of fixture effects and download default calibration values. <u>Calibrate Effects</u> - The menu allows the fine adjustment of effects. The menu contains list of effects which can be calibrated:

Pan- a fine pan movement Tilt - a fine tilt movement Colour Wheel 1 - a colour wheel 1 Colour Wheel 2 - a colour wheel 2 Cyan - cyan flags Magenta - magenta flags Yellow - yellow flags CTO - CTO flags Graphics Wheel - a graphics wheel Rot. Gobo Wheel 1 - a carousel of rotating gobos 1 R. Gobo Index 1/1 - a fine movement of rotating gobo 1 R. Gobo Index 1/2 - a fine movement of rotating gobo 2 R. Gobo Index 1/3 - a fine movement of rotating gobo 3 R. Gobo Index 1/4 - a fine movement of rotating gobo 4 R. Gobo Index 1/5 - a fine movement of rotating gobo 5 R. Gobo Index 1/6 - a fine movement of rotating gobo 6 Rot. Gobo Wheel 2 - a carousel of rotating gobos 2 R. Gobo Index 2/1 - a fine movement of rotating gobo 1 R. Gobo Index 2/2 - a fine movement of rotating gobo 2 R. Gobo Index 2/3 - a fine movement of rotating gobo 3 R. Gobo Index 2/4 - a fine movement of rotating gobo 4 R. Gobo Index 2/5 - a fine movement of rotating gobo 5 R. Gobo Index 2/6 - a fine movement of rotating gobo 6 Prism 1 - a 6-facet radial prism Prism 1 Rot - a 6-facet radial prism rotation Prism 2 - a 6-facet axial prism Zoom - a zoom position Frost 1/1 - a light frost position 1 Frost 1/2 - a light frost position 2 Frost 2/1 - a medium frost position 1 Frost 1/2 - a medium frost position 2 Focus 1 - a focus position 1 Focus 2 - a focus position 2 Iris - an iris Strobe 1/1 - a strobe lamella 1 position 1 Strobe 1/2 - a strobe lamella 1 position 2 Strobe 2/1 - a strobe lamella 2 position 1 Strobe 2/2 - a strobe lamella 2 position 2 Dimmer 1/1 - a dimmer lamella 1 position 1 Dimmer 1/2 - a dimmer lamella 1 position 2 Dimmer 2/1 - a dimmer lamella 2 position 1 Dimmer 2/1 - a dimmer lamella 2 position 2 Diffusor - auxiliary optic element

By using these items you can calibrate and adjust effects to their right positions.

Calibration via the control board

1. Disconnect DMX controller from the fixture and enter the "Calibrate Effects" menu.

2. Use the [up arrow] and [down arrow] to find desired effect and touch it to enter the fine effect adjustment screen.

3. Set desired value and save it by touching the [confirm].

4. Repeat steps 2 and 3 for the next effects.

5. After calibrating all effects, touch the [confirm] to save all adjusted values and reset the fixture.

Calibration via the DMX controller

Connect DMX controller to the fixture and set fixture effects to the desired positions before fine calibration.
 Enter the "Calibrate Effects" menu and now you can exactly calibrate desired effects by DMX controller.

A calibration protocol:

Effect	Mode 1	Mode 2
Pan	channel 42	channel 34
Tilt	channel 43	channel 35
Colour Wheel 1	channel 44	channel 36
Colour Wheel 2	channel 45	channel 37
Cyan	channel 46	channel 38
Magenta	channel 47	channel 39
Yellow	channel 48	channel 40
СТО	channel 49	channel 41
Graphics Wheel	channel 50	channel 42
Rot. Gobo Wheel 1	channel 51	channel 43
R. Gobo Index 1/1	channel 52	channel 44
R. Gobo Index 1/2	channel 53	channel 45
R. Gobo Index 1/3	channel 54	channel 46
R. Gobo Index 1/4	channel 55	channel 47
R. Gobo Index 1/5	channel 56	channel 48
R. Gobo Index 1/6	channel 57	channel 49
Rot. Gobo Wheel 2	channel 58	channel 50
R. Gobo Index 2/1	channel 59	channel 51
R. Gobo Index 2/2	channel 60	channel 52
R. Gobo Index 2/3	channel 61	channel 53
R. Gobo Index 2/4	channel 62	channel 54
R. Gobo Index 2/5	channel 63	channel 55

R. Gobo Index 2/6	channel 64	channel 56
Prism 1	channel 65	channel 57
Prism 1 Rot	channel 66	channel 58
Prism 2	channel 67	channel 59
Zoom	channel 68	channel 60
Frost 1/1	channel 69	channel 61
Frost 1/2	channel 70	channel 62
Frost 2/1	channel 71	channel 63
Frost 1/2	channel 72	channel 64
Focus 1	channel 73	channel 65
Focus 2	channel 74	channel 66
Iris	channel 75	channel 67
Strobe 1/2	channel 76	channel 68
Strobe 2/1	channel 77	channel 69
Strobe 2/2	channel 78	channel 70
Dimmer 1/1	channel 79	channel 71
Dimmer 1/2	channel 80	channel 72
Dimmer 2/1	channel 81	channel 73
Dimmer 2/1	channel 82	channel 74
Diffusor	channel 83	channel 75
	· ·· · · ·	

After having calibrated all effects, touch the [confirm] to save adjusted values and reset the fixture.

Load Default Calibrations - The item loads default (factory) calibration values.

<u>Calibrate Pan/Tilt EMS</u> - This menu item allows calibration of the pan/tilt electronic motion stabilizer. Important: during this calibration any external force must not influence the fixture and the surface at which the fixture stands (or truss if the fixture hangs) has to be without movement, shake, strokes etc.

<u>Updating software</u> - The menu item allows you to update software in the fixture via either serial or USB port of PC.

The following are required in order to update software:

- PC running Windows 95/98/2000/XP/7/8 or Linux

- DMX Software Uploader

- Flash cable RS232/DMX No.13050624 (if you want to use a serial port of PC)
- Robe Universal Interface (if you want to use an USB port of PC)

Note: Software update should execute a qualified person. If you lack qualification, do not attempt the update yourself and ask for help your ROBE distributor.

DMX address, IP address, programs 1-3 and all items in the menu "Personality" will be set to their default (factory) values.

To update software in the fixture:

I. Installation of the DMX Software Uploader.

1. DMX Software Uploader program is available from the ROBE web site at WWW.robe.cz.

2. Make a new directory (e.g. Robe_Uploader) on your hard disk and download the software to it.

3. Unpack the seftware.

II.Fixture software updating.

1.Determine which of your ports is available on your PC and connect it:

- with the DMX input of the fixture if you using the flash cable RS232/DMX

- with the DMX output of the Robe Universal Interface if you using the USB cable.

Disconnect the fixture from the other fixtures in a DMX chain. Turn both the computer and

the fixture on. Make sure the lamp is switched off (only if the fixture involves a lamp).

2. Switch the fixture to the updating mode by touching the "Updating Software " item Note: If you do not want to continue in software update, you have to switch off and on the fixture to escape from this menu.

We recommend to cancel all running programs before starting the Software Uploader.

3. Run the Software Uploader program. Select desired COM and then click on the Connect button. (Select COM if the serial port is used or Robe Universal Interface if the USB port is used). If the connection is OK, click on the "Start Uploading button" to start uploading. It will take several

minutes to perform software update. If the option "Incremental Update" is not checked, all processors will be updated (including

processors with the same software version). If you wish to update only later versions of processors, check the "Incremental Update box". Avoid interrupting the process. Update status is being displayed in the Info Box window. When the update is finished, the line with the text "The fixture is successfully updated" will appear in this window and the fixture will reset with the new software.

Note: In the case of an interruption of the upload process (e.g. power cut), the fixture keeps the updating mode and you have to repeat the software update again.

7.7 Icon "Lamp menu"



Lamp Status - The item enables to switch the lamp on/off. The Philips MSR Platinum 35 lamp is a cold restrike type, that means, that it has to be cold before striking.

<u>Settings</u> - The menu offers many items for setting of lamp behaviour.

Lamp Power - The menu offers two levels of the lamp power: 1700W, 1500W and the option Silent, at which the lamp power is auto-controlled to ensure minimum noise of the fixture fans.

All these options are available at DMX channel 6. The factory setting is 1700W.

Lamp Ignition Delay - The item allows to set the time delay(0-90sec.) before igniting the lamp by DMX command. If the lamp is started directly from the control panel, the set time delay will be ignored.

Lamp Light Sensor - Select this item to switch the light sensor off. The option "On" is intended for a standard operation. The option "Off" is for "emergency operation" only! If the lamp light sensor is switched off, the fixture will still try to ignite the lamp (even when the lamp is damaged or absent), on this account some electronics parts of the fixture can be damaged!

Lamp On/Off Settings - Use the menu to set rules for automatic switching on/off the lamp.

Lamp On Power On - If the item is on, the lamp will be automatically turn on after switching the fixture on.

Lamp Off via DMX - The item enables to switch the lamp off via DMX command from DMX controller.

Lamp On if DMX Present - The item allows you to strike the lamp automatically after 26 seconds if DMX signal is present on the fixture's DMX input.

Lamp Off if not DMX - The item allows you to switch off the lamp automatically after 2 minutes if DMX signal is missing on the fixture's DMX input.

8. RDM

This fixture supports RDM operation. RDM (Remote Device Management) is a bi-directional communications protocol for use in DMX512 control systems, it is the new open standard for DMX512 device configuration and status monitoring.

The RDM protocol allows data packets to be inserted into a DMX512 data stream without adversely affecting existing non-RDM equipment. By using a special "Start Code," and by complying with the timing specifications for DMX512, the RDM protocol allows a console or dedicated RDM controller to send commands to and receive messages from specific moving lights.

RDM allows explicit commands to be sent to a device and responses to be received from it. The list of commands for Robin BMFL Spot is the following.

Parameter ID	Discovery command	SET command	GET command
DISC_UNIQUE_BRANCH	*		
DISC_MUTE	*		
DISC_UN_MUTE	*		
DEVICE_INFO			*
SUPPORTED_PARAMETERS			*
SOFTWARE_VERSION_LABEL			*
DMX_START_ADDRESS		*	*
IDENTIFY_DEVICE		*	*
DEVICE_MODEL_DESCRIPTION			*
MANUFACTURER_LABEL			*
DEVICE_LABEL		*	*

	*
	*
*	*
*	*
*	*
*	*
*	
*	*
	*
	*
	*
*	*
*	*
	*
	*
	*
	<pre></pre>

1...Another options for this command (only for Robe's fixtures):

value PARAMETER_DATA=0x84 - lamp OFF by DMX value on DMX channel value PARAMETER DATA=0x88 - lamp OFF if DMX is not present

²...Commands relative resetable values

9. Wireless DMX operation

The wireless version of the Robin BMFL Spot is equipped with the Lumen Radio CRMX module and antenna for receiving DMX signal. CRMX module operates on the 2.4 GHz band.

The item "Wireless " from the menu "DMX Input" allows you to activate receiving of wireless DMX (Personality--> DMX Input -->Wireless.). First two options from the "DMX Input" menu are stated in DMX chart as well (channel Power/Special functions, range of 10-19 DMX). If DMX input option is changed by DMX command, the change is <u>permanently written</u> into fixture's memory.

DMX range of 10-19 switching fixture to the wired/wireless operation is active <u>only</u> during first 10 seconds after switching the fixture on.

After switching the fixture on, the fixture checks both modes of receiving DMX in the following order:

1. For the first five seconds, the fixture receives DMX signal from the wired input. If the Power/Special functions channel is set at some DMX input option, the fixture will receive DMX value according to this option. If DMX input option is set to the wired input, this option is saved and checking procedure is finished. If DMX input option is not set, the fixture continues next 5 seconds in scanning wireless DMX signal-see point 2.

2. For the next 5 seconds the fixture receives wireless DMX signal and again detects if the Power/Special functions channel is set at some DMX input option, if not, the fixture will take option which is set in the fixture menu "DMX Input".

To link the fixture with DMX transmitter.

The fixture can be only linked with the transmitter by running the link procedure at DMX transmitter . After linking, the level of DMX signal (0-100 %) is displayed in the menu item "Wireless State" (Information -->Wireless State).

To unlink the fixture from DMX transmitter.

The fixture can be unlinked from receiver via the menu item "Unlink Wireless Adapter" (Information--> Wireless State --> Unlink Wireless Adapter).

10. Error and information messages

🛞 - Air Filters Cleaning

This icon signalizes that cleaning period of the air filters has elapsed and you have to clear air filters and reset the menu item "Elapsed Time".

Occurred errors during fixture operation are signalled by the yellow warning icon at the bottom line of the screen:



Touch the warning icon or press the [ESCAPE] button to display error messages. List of error and information messages:

Active Lamp Timer

This message appears if you try to switch on the hot lamp. The fixture tries to ignite the lamp and during this time period the message is displayed.

Lamp Error

If the ignition of the lamp is 4 times unsuccessful, the display shows this message, meaning that the lamp could

be damaged or even missed or there could be a failure on the igniter or ballast.

Overheated

This message informs that the fixture head has been overheated and the lamp was switched off by means of the head temperature sensor (sensor Head Temperature).

Base Overheated

This message informs that the fixture base has been overheated and the lamp was switched off by means of the temperature sensor (sensor Ambient Temperature) in the base.

Temper.Sensor Error

The message informs you that the communication between the temperature sensor in the fixture head and its processor failed and the lamp has been switched off.

Tilt Error 1 (*Tilt Error 2*)

This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet is missing) or the stepping motor is defective or its driving IC on the PCB. The head is not located in the default position after the reset.

Pan Error 1 (Pan Error 2)

This message will appear after the reset of the fixture if the yoke's magnetic-indexing circuit malfunctions (sensor failed or magnet is missing) or the stepping motor is defective or its driving IC on the PCB. The yoke is not located in the default position after the reset of the fixture.

Colour Wheel 1 Error 1(Colour Wheel 1 Error 2)

The messages will appear after the reset of the colour wheel if this wheel is not located in the default position.

Colour Wheel 2 Error 1(Colour Wheel 2 Error 2)

The messages will appear after the reset of the colour wheel if this wheel is not located in the default position.

Cyan Lamella Error 1 (Cyan Error 2)

The messages will appear after the reset of the cyan flag if the flag is not located in the default position.

Magenta Lamella Error 1 (Magenta Error 2)

The messages will appear after the reset of the magenta flags if the flag is not located in the default position.

Yellow Lamella Error 1 (Yellow Error 2)

The messages will appear after the reset of the yellow flags if the flag is not located in the default position.

CTO Lamella Error 1 (CTO Lamella Error 2)

The messages will appear after the reset of the CTO flag if the flag is not located in the default position.

Prism 1 Error 1 (Prism 1 Error 2)

The messages will appear after the reset of the 6-facet linear prism if this prism is not located in the default position.

Prism 1 Rot. Error 1 (Prism 1 Rot. Error 2)

The messages will appear after the reset of the 6-facet linear prism if the prism rotation is not in the default position.

Prism 2 Error 1 (Prism 2 Error 2)

The messages will appear after the reset of the 6-facet axial prism if this prism is not located in the default position.

Zoom Error 1 (Zoom Error 2)

The messages will appear after the reset of the zoom module if the zoom lens is not located in the default position.

Focus 1 Error 1 (Focus 1 Error 2)

The messages will appear after the reset of the focus module if the focus module 1 is not located in the default position.

Focus 2 Error 1 (Focus 2 Error 2)

The messages will appear after the reset of the focus module if the focus module 2 is not located in the default position.

Gobo Carousel 1 Error 1 (Gobo Carousel 1 Error 2)

The messages will appear after the reset of the gobo carousel 1 if this wheel is not located in the default position.

Gobo rotation 1 Error 1 (Gobo Rotation 1 Error 2)

The messages will appear after the reset of the rotating gobo wheel 1 if the rotating gobos are not located in the default positions.

Gobo Carousel 2 Error 1 (Gobo Carousel 2 Error 2)

The messages will appear after the reset of the gobo carousel 2 if this wheel is not located in the default position.

Gobo rotation 2 Error 1 (Gobo Rotation 2 Error 2)

The messages will appear after the reset of the rotating gobo wheel 2 if the rotating gobos are not located in the default positions.

Faulty battery

The battery on the display board is exhausted and should be replaced immediately.

Lamp Fan Bad, Lamp Off

One of the blowers (Fan 1, Fan 2) cooling the lamp malfunctioned and the lamp was switched off.

Front Fan Bad, Lamp Off.

One of the sucking fans (Fan 6, Fan 7) in the fixture head malfunctioned and the lamp was switched off.

Base Fan Bad, Lamp Off

One of the fans (Fan 5, Fan 6) in the fixture base malfunctioned and the lamp was switched off.

CMY Fans Bad, Lamp Off

Both fans (Fan 3, Fan 4) in the CMY module in the fixture head malfunctioned and the lamp was switched off.

CMY Fan Bad, Lamp P. Reduced

One of the fans (Fan 3, Fan 4) in the CMY module in the fixture head malfunctioned and the lamp power has been reduced.


Gobo Fan Bad, Lamp P. Reduced

The gobo blower (Fan 5) at gobo wheels in the fixture head malfunctioned and the lamp power is reduced when the gobo wheel 1 (2) or animation wheel is moving into the light beam.

Arm Fan Bad

The small fan (Fan 8) in the fixture arm malfunctioned.

Fans location:

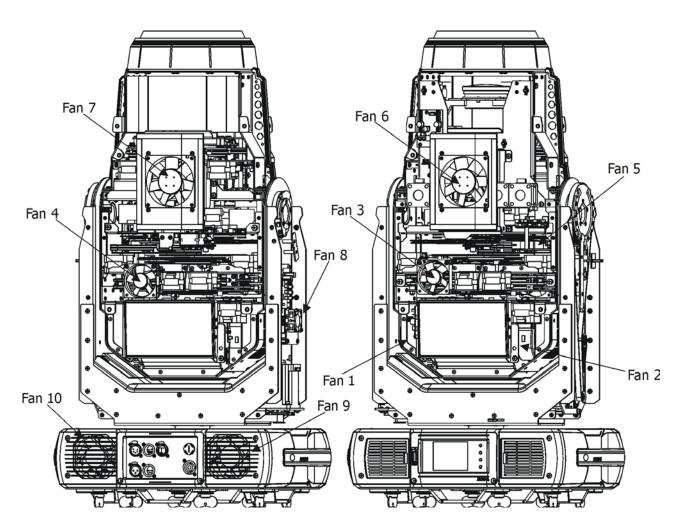

11. Technical Specifications

Electrical

Lamp

Approved model: HTI 1500W/60/P28 Lok-it! (125,000 lumens, CRI>=90, CCT=6000K, 750 hrs. life at 1500W, 500 hrs. life at 1700W)) Base: PGJ28 Lok-it!

Ballast

Electronic

Optical System

High luminous-efficiency glass reflector Zoom range: 5 °- 55° (open hole); 5° – 48° (gobo)

Colour wheel 1

6 dichroic filters (deep red, deep blue, orange, green, magenta, congo blue) + open

Colour wheel 2

6 replaceable 'SLOT&LOCK' dichroic filters (pink, lavender, laser green, CTB, minus 1/1 green, minus 1/2 green) + open

CMY + CTO mixing module


Smooth CMY colour mixing system Colour temperature correction filter lowers the colour temperature to 2700 K 30 colour macros

Rotating gobo wheel 1

6 glass gobos can be indexed and rotated in both directions at different speeds Gobo wheel continuous rotation

Glass gobos: outside diameter=30.8 mm, image diameter=25 mm, max. thickness=3.5 mm, high temperature borofloat or better glass

"Slot&lock" system for easy replacement of gobos

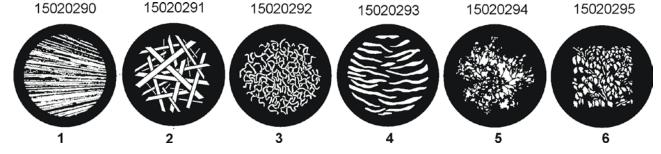


Rotating gobo wheel 2

6 glass gobos can be indexed and rotated in both directions at different speeds Gobo wheel continuous rotation Glass gobos: outside diameter=30.8 mm, image diameter=25 mm, max. thickness=3.5 mm, high

Glass gobos: outside diameter=30.8 mm, image diameter=25 mm, max. thickness=3.5 mm, ,high temperature borofloat or better glass

"Slot&lock" system for easy replacement of gobos

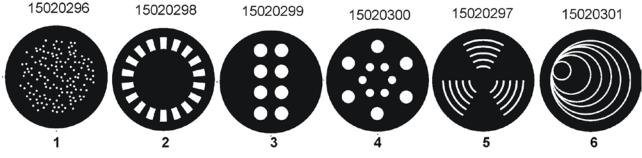

Prism

2 rotating prisms (6-facet linear, 6-facet axial) with continuous rotation in both directions

Iris Motorized iris for different beam diameters

Frost filter

3 separate, variable frost filters

Zoom

Linear motorized zoom

Dual graphic wheel

2 graphic wheels rotating in both directions



Strobe

Strobe effect with variable speed (up to 10 Hz) Electronic strobe

Dimmer

Smooth dimmer from 0 - 100 %

Control

Graphic touch screen for fixture setting and addressing Gravitation sensor for auto screen positioning Battery backup of the touch screen Readout fixture and lamp usage, receiving DMX values, temperatures, etc Built-in analyzer for easy fault finding, error messages Remotely switching on/off the lamp Built-in demo sequences Black-out while head moving, colour or gobo changing Silent cooling, Pan/Tilt electronic motion stabilizer Stand-alone operation 3 user editable programs, each up to 100 steps Supported protocols: USITT DMX 512, RDM, ArtNet, MANet, MANet2, sACN Support of RDM (Remote Device Management) 2 DMX modes (41, 33 control channels)

Wireless DMX/RDM module (Wireless DMX version only)

Compliance with USITT DMX-512 (1986 & 1990) and 512-A Full DMX fidelity and frame integrity Auto sensing of DMX frame rate and frame size <5ms DMX latency Operational frequency range of 2402-2480 MHz Producer: LumenRadio

Pan/Tilt

Pan movement range 540° Tilt movement range 270° 16 bit movement resolution Automatic Pan/Tilt position correction Remotely controllable speed of pan/tilt movement for easy programming Movement control: tracking and vector Pan/tilt-lock mechanism

Rigging

Mounting points: 2 pairs of 1/4-turn locks Mounting horizontally or vertically via 2 Omega brackets

Temperatures

Maximum ambient temperature : 45° C Maximum housing temperature : 170° C (at air vents in fixture head)

Minimum distances

Min. distance from flammable surfaces: 1 m Min. distance to alight object: 8 m

Connection

DMX data in/out: Locking 3-pin and 5-pin XLR ArtNet: RJ 45 (Neutrik Ethercon) AC power IN: Chassis connector Neutrik PowerCon, A-type, NAC3MPA


Total heat dissipation


6480 BTU/h (calculated)

Weight (net):

35.8 kg

Dimensions (mm)

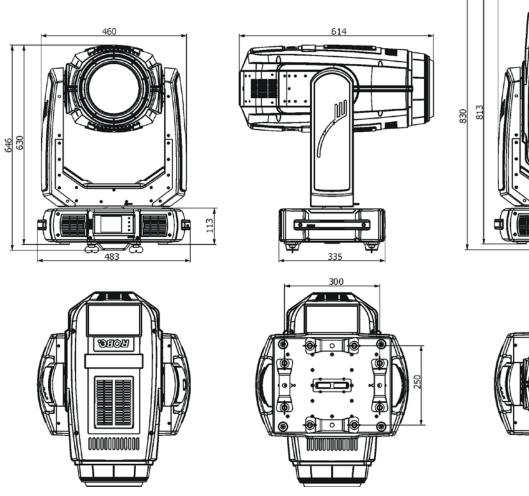

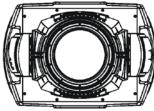

460

DOODUUUUUU

ROBA


i i

:


Accessories

Omega holder (No.99010420)	2 pcs
Power cable	1 рс

Min. Zoom

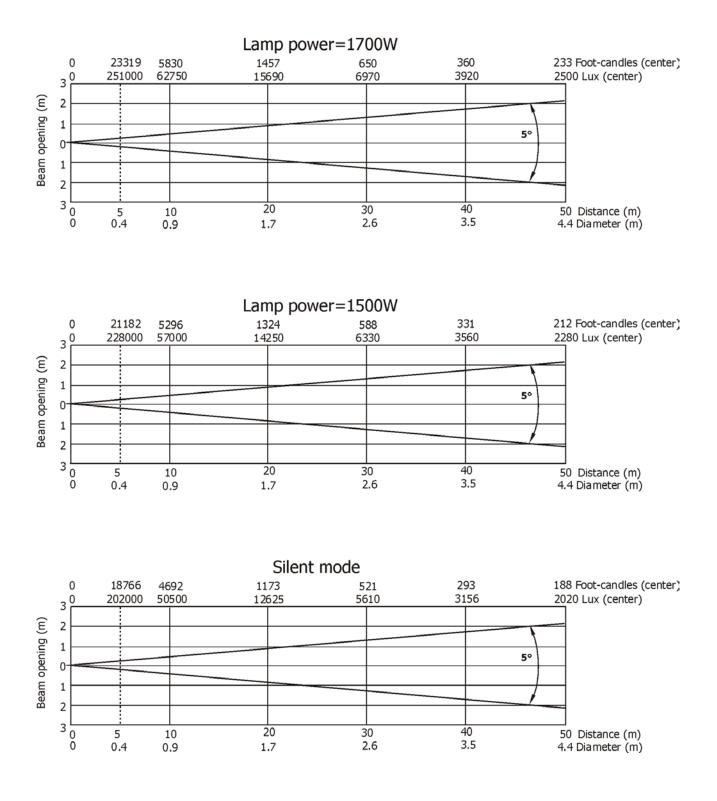

Max. Zoom

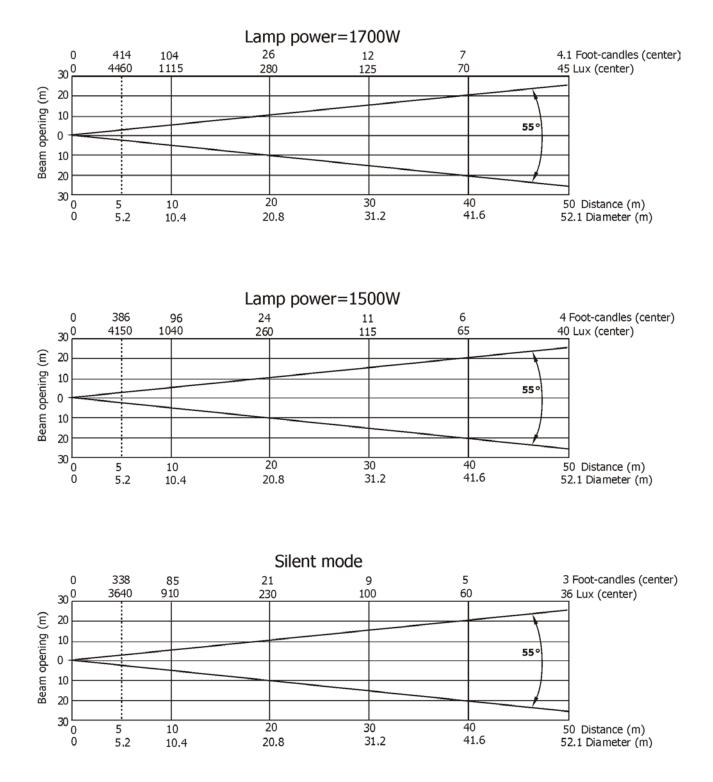

12. Maintenance and cleaning

It is absolutely essential that the fixture is kept clean and that dust, dirt and smoke-fluid residues must not build up on or within the fixture. Otherwise, the fixture's light-output will be significantly reduced. Regular cleaning will not only ensure the maximum light-output, but will also allow the fixture to function reliably throughout its life. A soft lint-free cloth moistened with any good glass cleaning fluid is recommended, under no circumstances should alcohol or solvents be used!

DANGER ! Disconnect from the mains before starting any maintenance work

The front objective lens will require weekly cleaning as smoke-fluid tends to building up residues, reducing the light-output very quickly. The cooling-fans should be cleaned monthly.

The interior of the fixture should be cleaned at least annually using a vacuum-cleaner or an air-jet.

Dichroic colour filters, CMY lamellas, gobo and graphic wheels and the internal lenses should be cleaned monthly.

Remove dust and dirt from the fans and cooling vents using a soft brush and vacuum-cleaner.

Important! Check the air filters periodically and clean before they become clogged!

Clean two air filters placed in the fixture's covers and two in the fixture base. Use a vacuum cleaner, compressed air or you can wash them and put back dry.

After replacing the air filters, reset the elapsed time counter in the menu "Information" (Information--->Air Filters---> Elapsed Time).

Replacing the fuse.

Before replacing the fuse, unplug mains lead.

- 1) Remove the fuse holder on the rear panel of the base with a fitting screwdriver from the housing (anti-clockwise).
- 2) Remove the old fuse from the fuse holder.
- 3) Install the new fuse in the fuse holder (only the same type and rating).
- 4) Replace the fuseholder in the housing and fix it.

Specifications are subject to change without notice. August 19, 2014

Robin BMFL Spot - DMX protocol, version 1.0				
Mode/	/channel	DMX	Function	Type of
1	2	Value	runction	control
1	1		Pan	
		0 - 255	Pan movement by 540°	proportional
2	2		Pan Fine	
		0 - 255	Fine control of pan movement	proportional
3	3		Tilt	
		0 - 255	Tilt movement by 270°	proportional
4	4		Tilt fine	
		0 - 255	Fine control of tilt movement	proportional
5	5		Pan/Tilt speed , Pan/Tilt time	
		0	Standard mode	step
		1	Max. Speed Mode	step
			Pan/Tilt speed mode	
		2 - 255	Speed from max. to min.	proportional
			Pan/Tilt time mode	
		2 - 255	Time from 0.2 s to 25.5 sec.	proportional
6	6		Power/Special functions	
		0 - 9	Reserved To activate following functions, stop in DIVIX value for at least 3 s	
			and shutter must be closed at least 3 sec. ("Shutter, Strobe"	
			channel 39/32 must be at range: 0-31 DMX). Corresponding menu	
			items are temporarily overriden except DMX Input.	
		10-14	DMX input: Wired DMX *	step
		15-19	DMX input: Wireless DMX *	step
			* function is active only10 seconds after switching the fixture on	
		20-24	Graphic display On	step
		25-29	Graphic display Off	step
		30-34	Reserved	
		35-39	Lamp power 1500W	step
		40-44	Lamp power 1700W	step
		45-49	Silent mode	step
		50-54	Dimmer curve: Square law	step
		55-59	Dimmer curve: Linear	step
		60-64	Fans mode: Auto	step
		65-69	Fans mode: High	step
		70-89	Reserved	4000
		90 - 94	Pan/Tilt speed mode	step
		95-99	Pan/Tilt time mode	step
		100 - 104	Blackout while pan/tilt moving	step
		105 -109	Disabled blackout while pan/tilt moving	step
		11 0-114	Blackout while colour wheels moving	step
		115 -119	Disabled blackout while colour wheels moving	step
		120-124	Blackout while gobo wheels moving	step
		125-129	Disabled blackout while gobo wheels moving	step
		123 123	To activate following functions, stop in DMX value for at least 3	Jiep
			seconds.	
		130 - 139	Lamp On	step
		140 - 149	Pan/Tilt reset	step

r	1		[
			Colour system reset	step
			Gobo wheels reset	step
			Dimmer/Shutter reset	step
			Zoom/focus/frost/prism reset	step
			Iris/dual graphic wheel reset	step
			Total reset	step
		210 - 229		
		230 - 239	-	step
		240 - 255		step
7	7		Colour wheel 1	
			Continual positioning	
		0	Open/white	proportional
		18	Deep red	proportional
-		34	Deep blue	proportional
		55	Orange	proportional
		73	Green	proportional
		91	Magenta	proportional
		110	Congo blue (UV)	proportional
		128-129	White	step
			Positioning	
		130-139	Deep red	step
		140-149	Deep blue	step
		150-159	Orange	step
		160-169	Green	step
		170-179	Magenta	step
		180-189	Congo blue (UV)	step
		190 - 215	Forwards rainbow effect from fast to slow	proportional
		216 - 217	No rotation	step
		218 - 243	Backwards rainbow effect from slow to fast	proportional
		244 - 249	Random colour selection by audio control	step
			(Set microphone sensitivity in menu "Personality")	
		250 - 255	Auto random colour selection from fast to slow	proportional
8	*		Colour wheel 1 - fine positioning	
		0 - 255	Fine positioning	proportional
9	8		Colour wheel 2	
			Continual positioning	
		0	Open/white	proportional
		18	Pink	proportional
		37	Lavander	proportional
		55	Light green	proportional
		73	СТВ	proportional
		91	minus 1/1 green	proportional
		110	minus 1/2 green	proportional
		128-129	White	step
			Positioning	
		130-139	Pink	step
		140-149	Lavander	step
		150-159	Light green	step
		160-169	СТВ	step
		170-179	minus 1/1 green	step
		180-189	minus 1/2 green	step
	1	200 100	·······	Jiep

		190 - 215	Forwards rainbow effect from fast to slow	proportional
			No rotation	step
			Backwards rainbow effect from slow to fast	proportional
			Random colour selection by audio control	step
			(Set microphone sensitivity in menu "Personality")	
		250 - 255	Auto random colour selection from fast to slow	proportional
10	*		Colour wheel 2 - fine positioning	
		0 - 255	Fine positioning	proportional
11	9		Cyan	
		0 - 255	Cyan (0-white, 255-full cyan)	proportional
12	10		Magenta	
		0 - 255	Magenta (0-white, 255-full magenta)	proportional
13	11		Yellow	
		0 - 255	Yellow (0-white, 255-full yellow)	proportional
14	12		CTO filter	
		0 - 255	(0-6700K, 255-2700K)	proportional
15	13		CMY colour macros	
		0 - 7	No function	step
		8 - 15	Macro 1	step
		16 -23	Macro 2	step
		24-31	Macro 3	step
		32-39	Macro 4	step
		40-47	Macro 5	step
		48-55	Macro 6	step
		56-63	Macro 7	step
		64-71	Macro 8	step
		72-79	Macro 9	step
		80-87	Macro 10	step
		88-95	Macro 11	step
		96-103	Macro 12	step
		104-111	Macro 13	step
		112-119	Macro 14	step
		120-127	Macro 15	step
		128-135	Macro 16	step
		136-143	Macro 17	step
		144-151	Macro 18	step
		152-159	Macro 19	step
		160-167	Macro 20	step
		168-175	Macro 21	step
		176-183	Macro 22	step
		184-191	Macro 23	step
		192-199	Macro 24	step
			Macro 25	step
			Macro 26	step
			Macro 27	step
		224 - 231		step
		232 - 239		step
		240 - 243		proportional
		244 - 249	Random macro selection by audio control	step
		250 255	(Set microphone sensitivity in menu "PErsonality")	
		250 - 255	Auto random macro selection from fast to slow	proportional

16	14		Effect Speed	
			Speed of CMY&CTO movement and Rot. Gobo selection	
		0-255	Speed of CMY+CTO movement from max. to min.	proportional
		0-255	Speed of Rot. Gobo Selection from max. to min.	proportional
17	15		CMY+CTO+Colour wheel time	
		0	Function is off	step
		1 - 255	Time of CMY, CTO and Colour wheel movement (0.1sec>25.5sec.)	proportional
18	16		Zoom+Focus+Iris+Frost+Prism time	
		0	Function is off	step
			Time of zoom, focus, iris and frost movement (0.1 sec>25.5	
		1 - 255	sec.)	proportional
		1-50	Time of prism movement (0.1 sec>5 sec.)	proportional
19	17		Dual graphic wheel positioning	
		0-19	No function	step
		20-127	Proportional indexing (73-center)	proportional
		128-170	Ramping from open to full position (max>min. speed)	proportional
		171-213	Ramping from open to half position (max>min. speed)	proportional
		214-255	Ramp. from half position to full position (max>min. speed)	proportional
20	18		Dual graphic wheel-Graphic wheel 1 rotation	
		0	No rotation	step
		1 - 127	Forwards rotation from fast to slow	proportional
		128	No rotation - <u>default</u>	step
		129 - 255	Backwards rotation from slow to fast	proportional
21	19		Dual graphic wheel-Graphic wheel 2 rotation	
		0	No rotation	step
		1 - 127	Forwards rotation from slow to fast	proportional
	-	128	No rotation - <u>default</u>	step
		129 - 255	Backwards rotation from slow to fast	proportional
22	20		Dual graphic wheel animations	
		0-7	No animation	step
			<u>Colour animations</u>	
			(Distance from projection screen: 5m, zoom=155 DMX) Note : The channels are blocked: Colour wheel 1 and 2, Cyan,	
			Magenta, Yellow, Rotating gobo wheel 1 and 2, Prism, Prism	
			rotation, Dual graphic wheel, Graphic wheel 1,2	
			Use Rot. Gobo 1 (2) indexing and rotation channel to index the	
			animation	
		8-9	Animation 1 (Focus=178)	step
		10-11	Animation 2 (Focus=211)	step
		12-13	Animation 3 (Focus=252)	step
		14-15	Animation 4 (Focus=138)	step
		16-17	Animation 5 (Focus=138)	step
		18-19	Animation 6 (Focus=210)	step
		20-21	Animation 7 (Focus=203)	step
		22-23	Animation 8 (Focus=180) Note : The channels are blocked: Colour wheel 1 and 2, Cyan,	step
			Magenta, Yellow, Rotating gobo wheel 1 and 2, Rot. Gobo 1 and 2	
			indexing, Prism, Prism rotation, Dual graphic wheel, Graphic wheel 1,2	
		24.25		ctor
		24-25 26-27	Animation 9 (Focus=148)	step
		26-27	Animation 10 (Focus=151)	step
		28-29	Animation 11 (Focus=193)	step

r			
	30-31	Animation 12 (Focus=141)	step
	32-33	Animation 13 (Focus=138)	step
	34-35	Animation 14 (Focus=143)	step
	36-37	Animation 15 (Focus=135)	step
	38-39	Animation 16 (Focus=153)	step
	40-41	Animation 17 (Focus=153)	step
	42-43	Animation 18 (Focus=153)	step
	44-45	Animation 19 (Focus=185)	step
	46-47	Animation 20 (Focus=185)	step
	48-49	Animation 21 (Focus=178)	step
	50-51	Animation 22 (Focus=167)	step
	52-53	Animation 23 (Focus=168)	step
	54-55	Animation 24 (Focus=168)	step
	56-57	Animation 25 (Focus=133)	step
	58-59	Animation 26 (Focus=168)	step
	60-61	Animation 27 (Focus=232)	step
	62-63	Animation 28 (Focus=155)	step
	64-65	Animation 29 (Focus=176)	step
	66-67	Animation 30 (Focus=221)	step
		Black and white animations	
		Note : The channels are blocked: Rotating gobo wheel 1 and 2,	
		Prism, Prism rotation, Dual graphic wheel, Graphic wheel 1,2 Use Rot. Gobo 1 (2) indexing and rotation channel to index the	
		animation	
	68-69	Animation 1 (Focus=178)	step
	70-71	Animation 1 (Focus=178) Animation 2 (Focus=211)	step
	72-73	Animation 2 (Focus=252)	step
	74-75	Animation 5 (Focus=232) Animation 4 (Focus=138)	step
	76-77	Animation 4 (Tocus=138) Animation 5 (Focus=138)	step
	78-79	Animation 5 (Focus=155)	step
	80-81	Animation 7 (Focus=203)	step
	82-83	Animation 8 (Focus=180)	step
	82-85	Note : The following channels are blocked: Rotating gobo wheel	step
		1 and 2, Rot. Gobo 1 and 2 indexing, Prism, Prism rotation, Dual	
		graphic wheel, Graphic wheel 1,2	
	84-85	Animation 9 (Focus=148)	step
	86-87	Animation 10 (Focus=151)	step
	88-89	Animation 11 (Focus=193)	step
	90-91	Animation 12 (Focus=141)	step
	92-93	Animation 13 (Focus=138)	step
	94-95	Animation 14 (Focus=143)	step
	96-97	Animation 15 (Focus=135)	step
	98-99	Animation 16 (Focus=153)	step
	100-101	Animation 17 (Focus=153)	step
	102-103	Animation 18 (Focus=153)	step
	104-105	Animation 19 (Focus=185)	step
	106-107	Animation 20 (Focus=185)	step
	108-109	Animation 21 (Focus=178)	step
	110-111	Animation 22 (Focus=167)	step
	112-113	Animation 23 (Focus=168)	step
	114-115	Animation 24 (Focus=168)	step

		116-117	Animation 25 (Focus=133)	step
		118-119	Animation 26 (Focus=168)	step
		120-121	Animation 27 (Focus=232)	step
		122-123	Animation 28 (Focus=155)	step
		122-125	Animation 29 (Focus=155)	step
		124-123	Animation 29 (Focus=170) Animation 30 (Focus=221)	· ·
		128-255	Reserved	step
23	21	128-255	Rotating gobo wheel 1	
23	21		In the range of 0-59 DMX the gobo selection speed is controlled	
			by the Effect Speed channel.	
			Index - set indexing on channel 24/22	
		0-4	Open/hole	step
		5-8	Gobo 1	step
		9-13	Gobo 2	step
		14-17	Gobo 3	step
		18-22	Gobo 4	
		23-26	Gobo 5	step
		23-20	Gobo 6	step step
		27-51	Rotation - set rotation on channel 24/22	step
		32-35	Gobo 1	ator
		36-40	Gobo 2	step
		41-44	Gobo 2 Gobo 3	step
				step
		45-49	Gobo 4	step
		50-54	Gobo 5	step
		55-59	Gobo 6	step
			Shaking gobos from slow to fast	
		CO 71	Index - set indexing on channel 24/22	
		60-71	Gobo 1	proportional
		72-83	Gobo 2	proportional
		84-95	Gobo 3	proportional
		96-106	Gobo 4	proportional
			Gobo 5	proportional
		119-129	Gobo 6	proportional
			Shaking gobos from slow to fast Rotation - set rotation on channel 24/22	
		130-141	Gobo 1	propertional
		130-141	Gobo 2	proportional
		142-153	Gobo 2 Gobo 3	proportional proportional
		166-176	Gobo S Gobo 4	
		177-188	Gobo 5	proportional
		177-188	Gobo 6	proportional
			Open/hole	proportional
			Forwards gobo wheel rotation from fast to slow	step proportional
			No rotation	
			Backwards gobo wheel rotation from slow to fast	step proportional
			Random gobo selection by audio control	
		244 - 249	(Set microphone sensitivity in menu "Personality")	step
		250 255		nno
24	22	250 - 255	Auto random gobo selection from fast to slow	proportional
24	~~~		Rot. Gobo 1 indexing/rotation Gobo indexing - set position on channel 23/21	
		0 255		propertional
		0 - 255	Gobo indexing	proportional

DMX protocol

			Gobo rotation - set position on channel 23/21	
		0	No rotation	step
		1 - 127	Forwards gobo rotation from fast to slow	proportional
		128	No rotation - default	step
		-	Backwards gobo rotation from slow to fast	proportional
25	*	125 255	Rot. Gobo 1 indexing/rotation - fine	proportional
23		0-255	Fine indexing (rotation)	proportional
26	23	0 255	Rotating gobo wheel 2	proportional
			In the range of 0-59 DMX the gobo selection speed is controlled	
			by the Effect Speed channel.	
			Index - set indexing on channel 27/24	
		0-4	Open/hole	step
		5-8	Gobo 1	step
		9-13	Gobo 2	step
		14-17	Gobo 3	step
		18-22	Gobo 4	step
		23-26	Gobo 5	step
		27-31	Gobo 6	step
			Rotation - set rotation on channel 27/24	
		32-35	Gobo 1	step
		36-40	Gobo 2	step
		41-44	Gobo 3	step
		45-49	Gobo 4	step
		50-54	Gobo 5	step
		55-59	Gobo 6	step
			Shaking gobos from slow to fast	
			Index - set indexing on channel 27/24	
		60-71	Gobo 1	proportional
		72-83	Gobo 2	proportional
		84-95	Gobo 3	proportional
		96-106	Gobo 4	proportional
		107-118	Gobo 5	proportional
		119-129	Gobo 6	proportional
			Shaking gobos from slow to fast	
			Rotation - set rotation on channel 27/24	
		130-141	Gobo 1	proportional
		142-153	Gobo 2	proportional
		154-165	Gobo 3	proportional
		166-176	Gobo 4	proportional
		177-188	Gobo 5	proportional
		189-199	Gobo 6	proportional
		200 - 201	Open/hole	step
		202 - 221	Forwards gobo wheel rotation from fast to slow	proportional
		222 - 223	No rotation	step
		224 - 243	Backwards gobo wheel rotation from slow to fast	proportional
		244 - 249	Random gobo selection by audio control	step
			(Set microphone sensitivity in menu "Personality")	
		250 - 255	Auto random gobo selection from fast to slow	proportional
27	24		Rot. Gobo 2 indexing/rotation	
			Gobo indexing - set position on channel 26/23	
		0 - 255	Gobo indexing	proportional

			Gobo rotation - set position on channel 26/23	
		0	No rotation	step
		1 - 127	Forwards gobo rotation from fast to slow	proportional
		128	No rotation - <u>default</u>	step
		129 - 255	Backwards gobo rotation from slow to fast	proportional
28	*		Rot. Gobo 2 indexing/rotation - fine	
		0-255	Fine indexing (rotation)	proportional
29	25		Prism	
		0 - 19	Open position (hole)	step
		20 -49	6-facet linear prism -indexing	step
		50 - 75	6-facet linear prism - rotation	step
		76 - 105	6-facet circular prism- Indexing	step
		106-127	6-facet circular prism-rotation	step
			Prism/gobo macros	
		128 - 135	Macro 1	step
		136 - 143	Macro 2	step
		144 - 151	Macro 3	step
		152 - 159	Macro 4	step
		160 - 167	Macro 5	step
		168 - 175	Macro 6	step
		176 - 183	Macro 7	step
		184 - 191	Macro 8	step
		192 - 199	Macro 9	step
		200 - 207	Macro 10	step
		208 - 215	Macro 11	step
		216 - 223	Macro 12	step
		224 - 231	Macro 13	step
		232 - 239	Macro 14	step
		240 - 247	Macro 15	step
		248 - 255	Macro 16	step
30	26		Prism rotation	
		0	No rotation	step
		1 - 127	Forwards rotation from fast to slow	proportional
		128	No rotation - <u>default</u>	step
		129-255	Backwards rotation from slow to fast	proportional
31	27		Frost	
		0	Open- <u>default</u>	step
			Light	
		1-50	Frost from 0% to 100%	proportional
		51-53	100% frost	step
		54-63	Pulse closing from slow to fast	proportional
		64-73	Pulse opening from fast to slow	proportional
		74-83	Ramping from fast to slow	proportional
		84-86	Open	step
			Medium	_
		87-136	Frost from 0% to 100%	proportional
		137-139	100% frost	step
		140-149	Pulse closing from slow to fast	proportional
		150-159	Pulse opening from fast to slow	proportional
		160-169	Ramping from fast to slow	proportional
		170-172	Open	step

173-222 Frost from 0% to 100% proportional 223-225 100% frost step 226-235 Pulse opening from fast to slow proportional 226-235 Pulse opening from fast to slow proportional 246-255 Ramping from fast to slow proportional 32 28 Iris 0 Open step 1.1.79 From max.diameter to min.diameter proportional 120-219 Pulse effects with Iris blackout: proportional 220-227 Pulse closing from fast to slow proportional 223-237 Pulse closing from fast to slow step 250-251 Random pulse closing (fast) step 252-253 Random pulse closing (fast) step 254-255 Random pulse closing (fast) step 0-255 Fine fine proportional 38<* Comm fram. to min.beam angle proportional 39 20 Zoom fine proportional 30 Focus proportional proportional 31				Неаvy	
223-225 100% frost step 226-235 Pulse closing from slow to fast proportional 226-235 Ramping from fast to slow proportional 226-235 Ramping from fast to slow proportional 246-255 Ramping from fast to slow proportional 32 28 Iris step 1 179 From max.diameter to min.diameter proportional 180-191 Closed step 2192-219 Pulse opening from slow to fast proportional 220-247 Pulse opening from slow to fast proportional 220-247 Pulse opening from slow to fast proportional 220-247 Pulse closing from fast to slow proportional 220-247 Pulse opening (fast) step 250-251 Random pulse opening (slow) step 252-253 Random pulse opening (slow) step 254-255 Random pulse closing (slow) step 33 * Iris - fine 0<0-255 Fine torm max.to min.beam angle proportional 35 * Zoom 0 0-255 Fine focusing 0 0-255 Fine focusing 10 0-255 Fine focusing			173-222		proportional
226-235 Pulse closing from slow to fast proportional 236-245 Pulse opening from fast to slow proportional 246-255 Ramping from fast to slow proportional 228 Iris proportional 1 1.1.79 From max.diameter to min.diameter proportional 180-191 Closed step 216-2219 Pulse opening from fast to slow proportional 228.221 Pulse closing from fast to slow proportional 220-247 Pulse closing from fast to slow proportional 2250-251 Random pulse opening (slow) step 2250-253 Random pulse closing (fast) step 2251 252 step step 2252-253 Random pulse closing (slow) step 238 * ris-fine proportional 33 * Iris-fine proportional 34 29 Zoom proportional 35 * Zoom - fine proportional 36 30 Focus proportional 37 * Focus - fine proportional 38 31 Autofocus Off step 39 32 Shutter closed step			223-225	100% frost	step
246-255Ramping from fast to slowproportional3228Irisstep00 Openstep1 - 179From max.diameter to min.diameterproportional1 180 - 191Closedstep2 192 - 219Pulse effects with Iris blackout:proportional2 202 - 247Pulse opening from slow to fastproportional2 202 - 247Pulse closing from fast to slowproportional2 250 - 251Random pulse opening (fast)step2 252 - 253Random pulse closing (fast)step2 254 - 255Random pulse closing (fast)step3 *Iris - fineproportional40 - 255Fine iris movementproportional5*Zoom - fineproportional60 - 255Fine iris movement from far to nearproportional7*Focus - fineproportional7*Focus - finestep100 - 255Fine focusingproportional7*Focus - finestep110 - 255Fine focusingproportional7*Focus - finestep120 - 31Shutter obsetstep13831Autofocus Offstep140 - 614Shutter obsetstep121 - 255Autofocus Offstep13932Shutter obsetstep14158Ologing pulse in sequences from slow to fastproportional159 <t< th=""><th></th><th></th><th>226-235</th><th>Pulse closing from slow to fast</th><th>proportional</th></t<>			226-235	Pulse closing from slow to fast	proportional
32 28 iris step 1 1.79 From max.diameter to min.diameter proportional 180-191 Closed step 202-247 Pulse effects with Iris blackout: proportional 212-219 Pulse opening from slow to fast proportional 220-247 Pulse closing from fast to slow proportional 220-247 Pulse closing from fast to slow proportional 220-251 Random pulse opening (slow) step 252-253 Random pulse closing (slow) step 254-255 Random pulse closing (slow) step 254-255 Random pulse closing (slow) step 0 0-255 Fine iris movement proportional 34 29 Zoom proportional 35 * Zoom - fine proportional 36 30 Focus proportional 37 * Focus - fine proportional 38 31 Autofocus proportional 39 32 Shutter open step 4 0 Autofocus Off step 5 Strobe-effect from slow to fast proportional 39 32 Shutter open step			236-245	Pulse opening from fast to slow	proportional
Image: stepStep11.179From max.diameter to min.diameterproportional180.191Closedstep192.219Pulse effects with Iris blackout:proportional192.219Pulse opening from slow to fastproportional220.247Pulse closing from fast to slowproportional221.219Pulse opening (form fast to slow)step222.223Random pulse opening (slow)step252.253Random pulse closing (fast)step254.255Fine iris movementproportional0.255Fine iris movementproportional0.255Fine iris movementproportional0.255Coom fineproportional0.255Fine couningproportional0.255Fine fineproportional0.255Fine focusproportional0.255Fine couningproportional0.255Fine focusproportional0.255Fine focusproportional0.255Fine focusproportional0.255Fine focusproportional0.255Fine focusproportional0.255Sinter formeproportional0.255Sinter formeproportional0.255Sinter closedstep0.255Shutter openstep10.255Strobe-effect from slow to fastproportional13831Autofocusproportional13932Shutter openstep1255Autofocus Onpro			246-255	Ramping from fast to slow	proportional
Image: constraint of the second state of the secon	32	28		Iris	
ItemItemClosedstep192-219Pulse opening from slow to fastproportional220-247Pulse closing from fast to slowproportional248-249Random pulse opening (fast)step250-251Random pulse opening (slow)step252-253Random pulse closing (fast)step254-255Random pulse closing (slow)step0-255Fine iris movementproportional00-255Fine iris movementproportional00-255Fine iris movementproportional00-255Fine iris movementproportional00-255Fine iris movementproportional00-255Fine zomingproportional00-255Fine zomingproportional00-255Fine closingproportional00-255Fine closingproportional00-255Fine fineproportional00-255Fine fineproportional00-255Fine focusingproportional100Autofocusproportional110Autofocusproportional12031Shutter (strobe1314Autofocusproportional14145Closing pulse in sequences from slow to fastproportional15122-23Random strobe-effect from slow to fastproportional16124Stubter open, Electronic strobing "ZAP" from slow to fastpropor			0	Open	step
Image: stepPulse effects with tris blackout:proportional192-219Pulse opening from slow to fastproportional220-247Pulse closing from fast to slowproportional248-249Random pulse opening (fast)step250-251Random pulse opening (slow)step252-253Random pulse closing (fast)step254-255Random pulse closing (fast)step254-255Random pulse closing (slow)step33*Iris - fine0-255Fine iris movementproportional360Zoom0-255Fine zoomingproportional37*Zoom - fine0-255Fine zoomingproportional3630Focus00-255Fine focusing00-255Fine focusing00Step100-255Fine focusing110Autofocus120Stutter (strobe)133114Shutter (strobe)14*15Stutter open160122-2317Shutter open, Step181819122-2319Shutter open19122-1310Stuter open11Stuter open1212313Stutter open, Electronic strobing "ZAP" from slow to fast14150Dimmer intensity from 0% to 100%19122-231030			1 - 179	From max.diameter to min.diameter	proportional
Image: 192-219Pulse opening from slow to fastproportional220-247Pulse closing from fast to slowproportional248-249Random pulse opening (fast)step252-253Random pulse opening (slow)step252-253Random pulse closing (fast)step253253Random pulse closing (slow)step254-255Random pulse closing (slow)step254-255Random pulse closing (slow)step33*tris - fine0-255Fine iris movementproportional3429Zoom0-255Zoom fineproportional5*Zoom - fine0-255Fine zoomingproportional3630Focus00-255Continuous adjustment from far to near00-255Fine focusing00Autofocus00Autofocus On100Autofocus On11Autofocus On120-31Shutter / strobe1393214Shutter open15Stobe-effect from slow to fast160-3117Shutter open18192-2231922-63193210Shutter open12Shutter open128-143Opening pulse in sequences from slow to fast190-129Strobe-effect from slow to fast192-223Random step-effect from slow to fast192-224Shut			180 - 191	Closed	step
Image: stepProportionalProportional248249Random pulse opening (fast)step250251Random pulse opening (slow)step252253Random pulse closing (fast)step254255Random pulse closing (slow)step254255Random pulse closing (slow)step254255Random pulse closing (slow)step3*Iris - fineproportional3429Zoomproportional35*Zoomproportional3605Fine iris movementproportional37*Zoom - fineproportional3630Focusproportional37*Zoom - fineproportional3831Focusproportional3932Soutinuous adjustment from far to nearproportional3931Autofocusproportional3932Shutter/strobestep3932Shutter / strobestep306495Strobe-effect from slow to fastproportional3932Shutter openstep306495Strobe-effect from slow to fastproportional3012Shutter open, Electronic strobing "ZAP" from slow to fastproportional3932Shutter open, Electronic strobing "ZAP" from slow to fastproportional30128Shutter open, Electronic strobing "ZAP" from slow to fastpropo				Pulse effects with Iris blackout:	
Image: stepStepStep250-251Random pulse opening (slow)Step252-253Random pulse closing (fast)Step252-253Random pulse closing (fast)Step254-255Random pulse closing (slow)Step33*Iris - fineProportional40-255Fine iris movementproportional429ZoomProportional5*Zoom - fineProportional60-255Fine zoomingproportional7*Zoom - fineProportional60-255Fine zoomingproportional7*Focus - fineProportional7*Focus - fineProportional831Autofocusproportional7*Focus - fineProportional831Autofocusproportional932Shutter/strobeProportional932Shutter closedstep932-63Shutter openstep932-63Shutter openstep9128-143Opening pulse in sequences from fast to slowproportional10129-223Random struge propertionalstep11128-143Opening pulse in sequences from fast to slowproportional12128-143Opening pulse in sequences from fast to slowproportional13144-159Closing pulse in sequences from slow to fastproportional144-159Shutter o			192 -219	Pulse opening from slow to fast	proportional
250 - 251Random pulse opening (slow)step252 - 253Random pulse closing (fast)step254 - 255Random pulse closing (slow)step33*Iris - fine0 - 255Fine iris movementproportional3429Zoom0 - 255Zoom from max. to min.beam angleproportional360 - 255Fine zomingproportional37*Zoom - fineproportional3830Focusproportional390 - 255Continuous adjustment from far to nearproportional37*Focusproportional3831Autofocusproportional3932Shutter/strobeproportional3932Shutter openstep3932Shutter openstep3064 - 95Strobe-effect from slow to fastproportional30128 - 143Opening pulse in sequences from fast to slowproportional3932Shutter openstep3164 - 95Strobe-effect from slow to fastproportional3232 - 63Shutter openstep33144 - 159Closing pulse in sequences from fast to slowproportional3433Dimmer intensity from 0% to 100%proportional3534Dimmer intensity - finestep3633Dimmer intensity - fineproportional			220 - 247	Pulse closing from fast to slow	proportional
Image: stepStepStep252 - 253Random pulse closing (fast)step33*Iris - finestep34*Iris - fineproportional3429Zoommovementproportional3429Zoommovementproportional3429Zoom from max. to min.beam angleproportional3630Focusproportional37*Zoom - fineproportional3630Focusproportional37*Focus - fineproportional3831Autofocusproportional3932Autofocus Offstep100.255Fine focusingproportional3932Shutter / strobeproportional3932Shutter / strobestep111.255Autofocus Offstep120.31Shutter / strobestep1396.127Shutter / strobestep141.41Opening pulse in sequences from slow to fastproportional151.255Shutter openstep161.252Shutter open, Electronic strobing "ZAP" from slow to fastproportional141.92.223Random strobe-effect from slow to fastproportional1441.92.235Shutter openstep1441.92Dimmer intensity from 0% to 100%proportional1441.92.255Dimmer intensity - finestep144<			248 - 249	Random pulse opening (fast)	step
Image: stepStateStateState33**Iris - fineImage: step34**0 - 255Fine iris movementproportional34290 - 255Soom from max. to min.beam angleproportional35**0 - 255Zoom - fineproportional36300 - 255Fine zoomingproportional36300 - 255Fine zoomingproportional37*0 - 255Continuous adjustment from far to nearproportional38300 - 255Fine focusingproportional3831MutofocusAutofocusproportional39320Autofocus Offstep311 - 255Autofocus Offstepproportional3932Shutter / strobestepstep310 - 31Shutter closedstep3196 - 127Strobe-effect from slow to fastproportional32128 - 143Opening pulse in sequences from fast to slowproportional33129128 - 143Opening pulse in sequences from fast to slowproportional33100 - 128Stutter openstepstep34128 - 128Shutter open, Electronic strobing "ZAP" from slow to fastproportional34128 - 128Shutter open, Electronic strobing "ZAP" from slow to fastproportional34139130Immer intensity from 0% to 100%step34130Immer intensity			250 - 251	Random pulse opening (slow)	step
33*Iris - fineIris - fine0 - 255Fine iris movementproportional3429Zoom0 - 255Zoom from max. to min.beam angleproportional35*Zoom - fine0 - 255Fine zoomingproportional3630Focusproportional37*O-255Continuous adjustment from far to nearproportional3830Focusproportional3931Autofocusproportional3932Shutter/ strobeproportional3932Shutter closedstep310 - 31Shutter closedstep32 - 63Shutter openstep33 - 128 - 128 - 139Strobe-effect from slow to fastproportional3932Shutter openstep310 - 31Shutter openstep32 - 63Shutter openstep33 - 128 - 143Opening pulse in sequences from slow to fastproportional3932Strobe-effect from slow to fastproportional330 - 127Shutter openstep34 - 128 - 143Opening pulse in sequences from fast to slowproportional3933Dimmer intensity from 0% to 100%proportional3433Dimmer intensity from 0% to 100%proportional			252 - 253	Random pulse closing (fast)	step
Image: space of the system o			254 - 255	Random pulse closing (slow)	step
3429ZoomImage Proportional35*Zoom from max. to min.beam angleproportional35*Zoom - fineproportional3630Focusproportional37*Focus - fineproportional37*Focus - fineproportional3831Autofocusproportional3831Autofocusproportional3932Shutter/strobeproportional3932Shutter/strobestep32 - 63Shutter closedstep33 - 64 - 95Strobe-effect from slow to fastproportional3996 - 127Shutter openstep31 - 128 - 143Opening pulse in sequences from slow to fastproportional3922 - 63Shutter openstep31 - 128 - 143Opening pulse in sequences from slow to fastproportional31 - 128 - 143Opening pulse in sequences from fast to slowproportional33 - 242 - 255Shutter openstep33 - 33Dimmer intensityproportional34 - 33Dimmer intensity from 0% to 100%proportional33 - 344Dimmer intensity - fineproportional	33	*		Iris - fine	
Image: star boxImage: star bo			0 - 255	Fine iris movement	proportional
35*Zoom - fine0-255Fine zoomingproportional3630Focus0 - 255Continuous adjustment from far to nearproportional37*Focus - fine0 - 255Fine focusingproportional3831Autofocus0Autofocus Offstep1 - 255Autofocus Onproportional3932Shutter/ strobe0 - 31Shutter closedstep32 - 63Shutter openstep33 - 64 - 95Strobe-effect from slow to fastproportional96 - 127Shutter openstep128 - 143Opening pulse in sequences from fast to slowproportional160 - 191Shutter open, Electronic strobing "ZAP" from slow to fastproportional192 - 223Random strobe-effect from slow to fastproportional192 - 223Dimmer intensitystep4033Dimmer intensity from 0% to 100%proportional41*Dimmer intensity - fine	34	29		Zoom	
Image: second			0 - 255		proportional
3630FocusProportional37*Focus - fineproportional37*Focus - fineproportional3831Autofocusproportional3831Autofocus Offstep1-255Autofocus Onproportional3932Shutter/strobestep0-31Shutter closedstep032 - 63Shutter openstep064 - 95Strobe-effect from slow to fastproportional96 - 127Shutter openstep128 - 143Opening pulse in sequences from fast to slowproportional160 - 191Shutter open, Electronic strobing "ZAP" from slow to fastproportional192 - 223Random strobe-effect from slow to fastproportional192 - 223Dimmer intensity from 0% to 100%proportional4033Dimmer intensity - finestep	35	*		Zoom - fine	
Image: constraint of the second sec			0-255	-	proportional
37*Focus - fine0-255Fine focusingproportional3831Autofocus0Autofocus Offstep1-255Autofocus Onproportional3932Shutter/strobe00 - 31Shutter closed32 - 63Shutter openstep32 - 63Shutter openstep96 - 127Shutter openstep128 - 143Opening pulse in sequences from slow to fastproportional160 - 191Shutter open, Electronic strobing "ZAP" from slow to fastproportional192 - 223Random strobe-effect from slow to fastproportional224 - 255Shutter openstep4033Dimmer intensityproportion% fine41*Dimmer intensity - fineproportional	36	30			
Image: stepPropertional3831Autofocus3831Autofocus Off40Autofocus Off1-255Autofocus On3932Shutter/strobe40 - 31Shutter/strobe50 - 31Shutter closed432 - 63Shutter open564 - 95Strobe-effect from slow to fast96 - 127Shutter openstep128 - 143Opening pulse in sequences from slow to fastproportional144 - 159Closing pulse in sequences from fast to slowproportional192 - 223Random strobe-effect from slow to fastproportional192 - 223Shutter openstep4033Dimmer intensity from 0% to 100%proportional41*Dimmer intensity - finestep			0 - 255		proportional
3831Autofocus0Autofocus Offstep1-255Autofocus Onproportional3932Shutter/strobe0-31Shutter closedstep32-63Shutter openstep64-95Strobe-effect from slow to fastproportional96-127Shutter openstep128-143Opening pulse in sequences from slow to fastproportional160-191Shutter open, Electronic strobing "ZAP" from slow to fastproportional192-223Random strobe-effect from slow to fastproportional192-225Shutter openstep224-255Shutter openstep4033Dimmer intensityproportion% to 100%41*Dimmer intensity - fineproportional	37	*			
Image: Note of the stepImage: Note of the stepImage: Note of the step3932Shutter/strobeImage: Note of the step3932Shutter closedstep40 - 31Shutter closedstep532 - 63Shutter openstep64 - 95Strobe-effect from slow to fastproportional96 - 127Shutter openstep128 - 143Opening pulse in sequences from slow to fastproportional160 - 191Shutter open, Electronic strobing "ZAP" from slow to fastproportional192 - 223Random strobe-effect from slow to fastproportional192 - 223Shutter openstep4033Dimmer intensity from 0% to 100%proportional41*Dimmer intensity - fineImage: Note of the step			0- 255	-	proportional
1-255Autofocus Onproportional3932Shutter/ strobereportional390 - 31Shutter closedstep1032 - 63Shutter openstep1164 - 95Strobe-effect from slow to fastproportional1196 - 127Shutter openstep11128 - 143Opening pulse in sequences from slow to fastproportional11144 - 159Closing pulse in sequences from fast to slowproportional11160 - 191Shutter open, Electronic strobing "ZAP" from slow to fastproportional11192 - 223Random strobe-effect from slow to fastproportional11192 - 255Shutter openstep14*Dimmer intensity from 0% to 100%proportional14*Dimmer intensity - fineproportional	38	31			
3932Shutter/strobe00-31Shutter closedstep32-63Shutter openstep64-95Strobe-effect from slow to fastproportional96-127Shutter openstep128-143Opening pulse in sequences from slow to fastproportional144-159Closing pulse in sequences from fast to slowproportional160-191Shutter open, Electronic strobing "ZAP" from slow to fastproportional192-223Random strobe-effect from slow to fastproportional224-255Shutter openstep4033Dimmer intensityproportional41*Dimmer intensity - fineproportional			-		
Image: Note of the image in	20	22	1-255		proportional
32 - 63Shutter openstep64 - 95Strobe-effect from slow to fastproportional96 - 127Shutter openstep128 - 143Opening pulse in sequences from slow to fastproportional144 - 159Closing pulse in sequences from fast to slowproportional160 - 191Shutter open, Electronic strobing "ZAP" from slow to fastproportional192 - 223Random strobe-effect from slow to fastproportional224 - 255Shutter openstep4033Dimmer intensity0 - 255Dimmer intensity from 0% to 100%proportional41*Dimmer intensity - fine	39	32	0.21		
Image: Second					
Image: Market					
Image: 128 - 143Opening pulse in sequences from slow to fastproportional144 - 159Closing pulse in sequences from fast to slowproportional160 - 191Shutter open, Electronic strobing "ZAP" from slow to fastproportional192 - 223Random strobe-effect from slow to fastproportional224 - 255Shutter openstep33Dimmer intensityproportional0 - 255Dimmer intensity from 0% to 100%proportional41*Dimmer intensity - fine					
Image: Insert of the section of the					
Image: 160 - 191Shutter open, Electronic strobing "ZAP" from slow to fastproportional192 - 223Random strobe-effect from slow to fastproportional224 - 255Shutter openstep33Dimmer intensity0 - 255Dimmer intensity from 0% to 100%proportional41*Dimmer intensity - fine		<u> </u>			
Image: 192-223Random strobe-effect from slow to fastproportional224-255Shutter openstep4033Dimmer intensity0-255Dimmer intensity from 0% to 100%proportional41*Dimmer intensity - fine		<u> </u>			
Image: Market					
40 33 Dimmer intensity proportional 0 - 255 Dimmer intensity from 0% to 100% proportional 41 * Dimmer intensity - fine Dimmer intensity - fine					
0 - 255 Dimmer intensity from 0% to 100% proportional 41 * Dimmer intensity - fine	40	33			
41 * Dimmer intensity - fine			0 - 255	-	proportional
0 - 255 Fine dimming proportional Image: Second se	41	*			
Image: Constraint of the system Image: Consthe system Image: Constrainton of t			0 - 255	Fine dimming	proportional
Image: Constraint of the second sec					
Image: Constraint of the second sec					
Image: Constraint of the second sec					
Image: Constraint of the second sec					