



CHANNEL	FUNCTION
1	COLOUR WHEEL
2	DIMMER/STOP/STROBO
3	FROST

• COLOUR WHEEL - channel 1

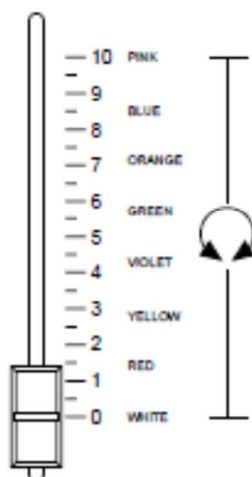


The change of colour in response to movement of the potentiometer is linear and continuous so that the slider can be stopped in intermediate positions to obtain a two colour beam.

• DIMMER/STOPPER/STROBE - channel 2

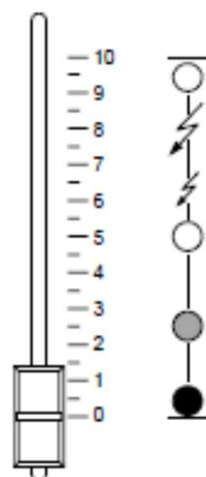

In the 0% to 50% range of adjustment, the dimmer opens gradually to maximum aperture. Strobe effect is produced from 54.7% to 95%, with frequency increasing from 1 to 7 flashes per second. The aperture remains fixed between 95% and 100% of the range.

• FROST - channel 3

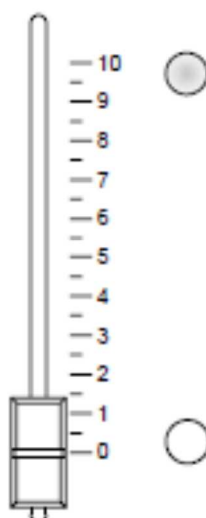

The frost filter is inserted gradually as the slider is advanced.